SW70W9
SW80W9
SW70G9
SW80G9

Fully Automatic Washing Machine

user manual

Planet First 100% Recycled Paper

This manual is made with 100% recycled paper.

imagine the possibilities

Thank you for purchasing a Samsung product.
To receive a more complete service, please register your product at

www.samsung.com/register

SAMSUNG

Code No. DC68-02961E-01_EN

SW70W9XFP-02961E-01_EN.indd 1 2012-12-18 7:09:31

features

- **Last Settings Feature**
  This option loads the previous course settings.
  The Last Settings feature automatically remembers the last course that was run, making it possible to use the same settings as the last time the washer was used without having to manually select all the settings.

- **Diamond Drum**
  The diamond shaped drum creates a high water pressure, removing dirt from the laundry effectively. The diamond drum minimizes fabric damage extending the lifetime of the fabric. The glittering inner tube is both beautiful and powerful in the wash effect it creates.

- **Fuzzy Control**
  Fuzzy control operates with best washing program by sensing the washload like artificial intelligence.

- **Tempered Transparent Door**
  Lets you observe while the washer is operating. Check on your laundry's progress at any time.

- **Eco Storm**
  A giant pulsator creates a powerful water current, which is further accelerated by a tilted center pulsator spinning at 360°. The resulting waterfall effect speeds up the circulation of the water to achieve a cleaner wash using just a small amount of water. (A better wash performance is achieved.)

- **Wobble (Option)**
  Conventional top loading automatic washing machines rotate the laundry clockwise or counter clockwise in 2 dimensions but Wobble Technology™ rotates the laundry by throwing it around in 3 dimensions.
  Since Wobble Technology™ moves the laundry horizontally and vertically at the same time, the rotating water stream may seem different from that of other washing machines.
  One of the features of the 3 dimensional wash function of Wobble Technology™ is washing at multiple water levels and this may include a wash period performed at a low water level.

- **Magic Filter**
  This unique Magic Filter ensures that all the lint inside the tub is captured for top quality filtering results to deliver consistently effective cleaning results.

- **CHILD-LOCK Function**
  This is a device to protect children from being accidentally hurt while playing with the washer.
  (For more information, see page 11, 14.)

- **Eco tub clean (Option)-Ultra Clean, Super Fresh**
  Samsung's Eco Clean Tub is specially designed to remove dirt and biofilm in the tub without special chemical detergent. This innovative function keeps drum extremely clean by soaking and spinning only with the water.

- **Aqua preserve (Option)**
  Samsung's Aqua Preserve reduced waste of water by reusing last rinsed out water. After rinsing the clothes lastly, the washing machine keeps the water before final spin-dry and use it again to save water and your money!
  (This function is only available to use when you select twice of rinsing)

- **Energy Saving**
  With this course, you can save energy when using your washing machine. The wash performance and damage test are recognized by registered institutions.

SW70W9XFP-02961E-01_EN.indd 2 2012-12-18 □□ 7:09:31

safety instructions

Please note that the following precautions for safety intend to prevent unpredictable danger and damage by helping the proper use in safety.
When using hot water in washing, please make sure that the water should not exceed 50°C.

- Plastic parts may be deformed or damaged, and an electric shock or a fire may take place.

WARNING

There might be serious injury or fatal accident when you violate this instruction.

- If the plug (power supply cord) is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Do not pull the cord off or touch it with moist hands.
  – An electric shock or a fire may take place.
- Do not bend the power supply cord by force or press it with heavy things.
  – An electric shock or a fire may take place.
- Do not install the washer nearby electric implement or don't put a candle light or cigarette light on the washer.
  – A fire may take place.
- During operation, do not put your hands or metal materials under the washer.
  – You may be hurt by spinning board beneath the washer.
- Stay away from the washer when the bottom of the washer sinks into the water.
  – There might be an electric shock. Please wait until the water drains out completely.
- Do not put laundry stained with gasoline, benzene, or alcohol in the washer, and keep the materials away from the washer.
  – An explosion or a fire may take place.
- During spinning, don't put your hand in the spinning tub.
  – It may hurt your hands. If it does not stop within 15 seconds after you open the lid, call service agent immediately.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
  Young children should be supervised to ensure that they do not play with the appliance.
- This appliance has to be connected to the plug endurable to proper power consumption.
- This appliance has to be positioned so that the plug is accessible after installation.
- No user-serviceable parts inside. Refer any servicing to qualified service personnel.
  – Otherwise this may cause a mechanical error, electric shock, fire or physical damage.
  – The product warranty does not cover problems resulting from disassembling the product.
- Do not use this product for business purposes.
- For washing machines with ventilation openings in the base, that a carpet must not obstruct the openings.

SW70W9XFP-02961E-01_EN.indd 3 2012-12-18 7:09:31

safety instructions

CAUTIONS

There might be a slight injury or damage when you violate this instruction.

- Don't install it in the area with moisture or outdoor where it has rain or snow.
  – An electric shock or a fire may take place.
- Please unplug the power supply cord when you do not use it.
  – An electric shock or a fire may take place.
- If there is dust or water on the power supply plug and its connected part, please remove it completely.
  – An electric shock or a fire may take place.
- Do not make your kids look into the inside of the washer.
  – If your kid falls into the washer, his life could be in danger.
- Ventilate immediately without touching the power plug if gas is leaking.
  – An electric shock or a fire may take place if it catches flame.
- If the washer makes strange noise, smell or smoke, unplug it promptly and call service agent.
  – An electric shock or a fire may take place.
- When cleaning, don't spray water to the parts of the washer directly.
  – It may make its life span shorten.
  Also an electric shock or fire may take place.
- Do not use the strong acid cleaning agent.
- Don't use several appliances together with an outlet.
  – A fire may take place due to unusual heat.
- Don't press the button with an awl or pin.
  – An electric shock or a fire may take place.
- Use the new hose-sets and old hose-sets should not be reused.
- If the damage is found on the current cord in use, it should be replaced by manufacturer, service center or authorized person in order to avoid the risk.
- Connect the grounding wire to the shell plate, and bury it under at least 25cm of earth:alternatively, connect the ground wire to the appropriate pin on a properly grounded power receptacle. Never connect the wire to a telephone line, lightning rod, or gas pipe. option
- The product you have purchased is designed for domestic use only.
  The use for business purposes qualifi es as product misuse. In this case, the product will not be covered by the standard warranty provided by Samsung and no responsibility can be attributed to Samsung for malfunctions or damages resulting from such misuse.

SW70W9XFP-02961E-01_EN.indd 4 2012-12-18 □□ 7:09:31

contents

SETTING UP YOUR WASHER 6

6 Description of part
9 How to wash automatically depends on the laundry
10 Control Panel

MANUAL FUNCTIONS 15

6 Manual functions

INSTALLATION & MAINTENANCE 16

16 Environment
16 Levelling
16 Connecting the water supply hose
18 Assembling the rat protection panel (option)
18 How to connect the drain hose (option)
21 Adding detergent
21 Adding fabric softener
22 Water supply connector filter
22 Cleaning the filter
23 Cleaning the pump filter (option)
23 Cleaning the detergent compartment

TROUBLESHOOTING 24

24 Troubleshooting

WASHING MACHINE WON'T WORK? 25

25 Washing machine won't work?

SPECIFICATION 26

26 Specification

SW70W9XFP-02961E-01_EN.indd 5 2012-12-18 □□ 7:09:31

setting up your washer

DESCRIPTION OF PART

The User's Manual is for common use.
Make use of the User's Manual depending upon your washing machine model.

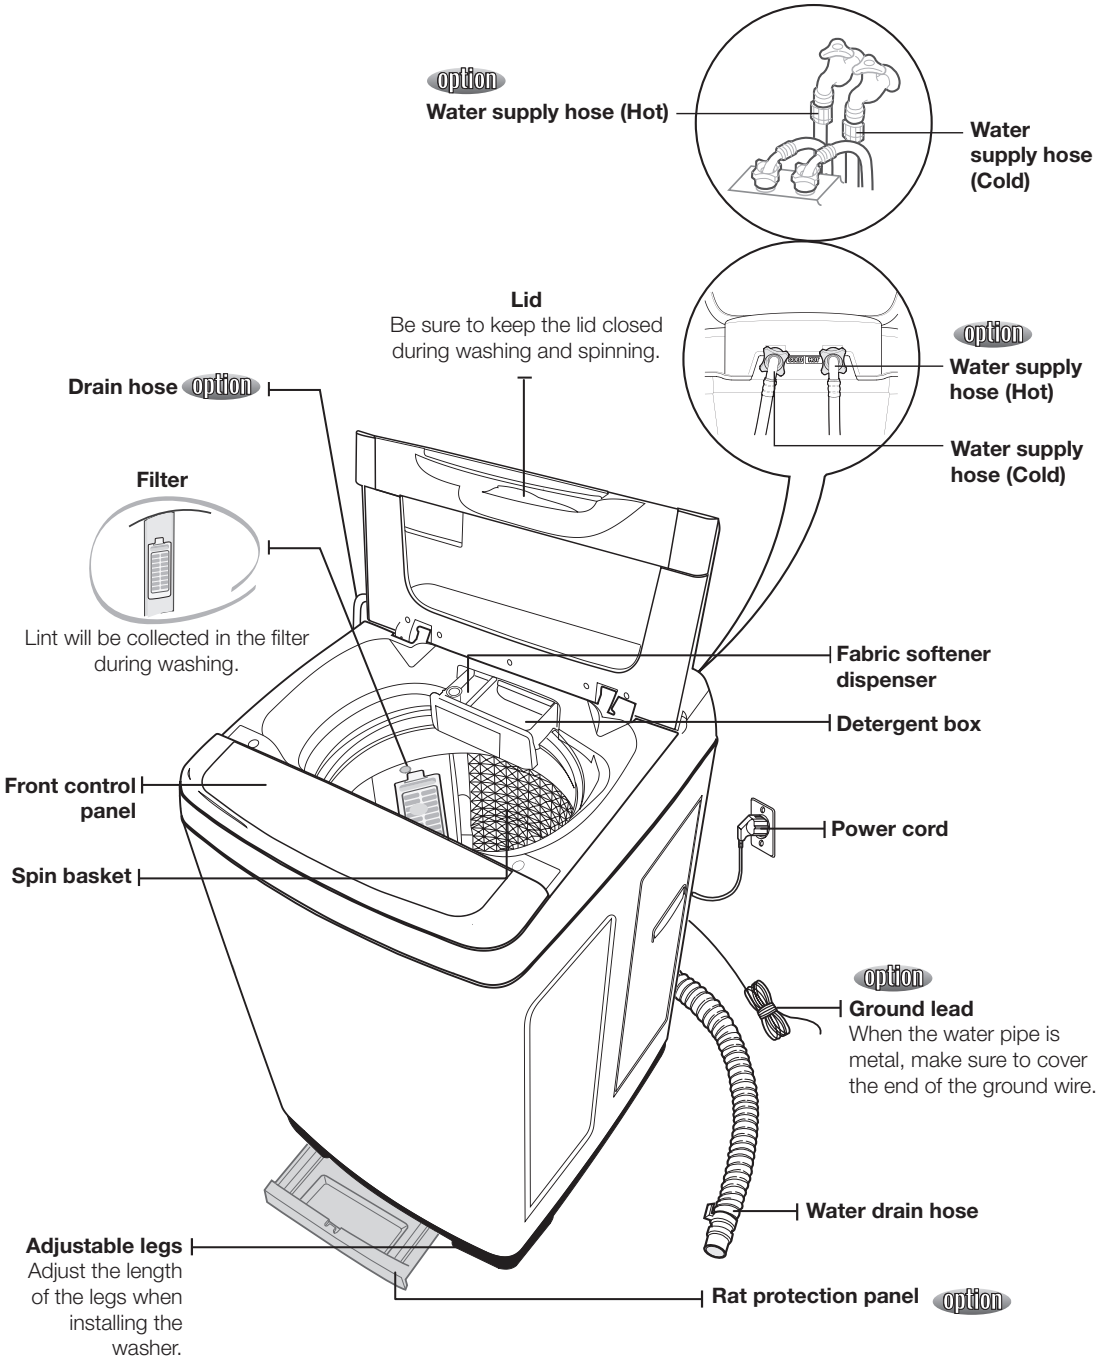
option
Water supply hose (Hot)
Water supply hose (Cold)
Lid
Be sure to keep the lid closed during washing and spinning.
option
Water supply hose (Hot)
Water supply hose (Cold)
Drain hose option
Filter
Lint will be collected in the filter during washing.
Fabric softener dispenser
Detergent box
Front control panel
Power cord
Spin basket
option
Ground lead
When the water pipe is metal, make sure to cover the end of the ground wire.
Water drain hose
Adjustable legs
Adjust the length of the legs when installing the washer.
Rat protection panel option

SW70W9XFP-02961E-01_EN.indd 6 2012-12-18 7:09:32

CHECKING BEFORE WASHING AND CARING FOR GARMENTS

Must follow the checkpoints in order to avoid machine problems or damages on garments.

- If the below problems are caused by customer's faults, separate service fee will be charged.

Checkpoints Before Starting Washing

Check if the clothes are bleaching or not.

- Add liquid detergent to a white towel and the garment where you can't notice well. Then, rub together strongly. Check if the color transferred to the towel.
- Be careful for scarves and imported clothes since they are easily discoloring.
- Check for stains or partial dirt.
- If stains are found, use the towel wet with detergents to rub on in a single direction.
- Before washing, the sleeves, collar, dress hem and pockets are pre-treated by brushing with detergents.

The wrinkle-processed clothes made of wool are specially treated by fixing them with threads before washing. The threads shall be removed after the clothes are dried.

Not washable laundry

Clothes those are easily transformable even by soaking in water.

- Even by soaking in water, neckties, brassieres, jackets, suits and coats can be easily transformed like shrinking and discoloring on the garment surfaces because they are mostly made of rayon, polynosic, cuff and their blend fabrics.
- The wrinkle-processed, embossed, or resin processed products are easy to transform even by soaking in water.
- Easily discoloring products made of cotton and wool, wrinkled silk, leather products, leather accessory, leather ornamented clothes and its accessory.
- Don't wash those clothes without handling guideline or material indication tag.

About Detergent

- When detergents are not dissolving well, use warm water (about 40°C) to dissolve the detergent.

CAUTION

- Use an appropriate amount.
- Even if excess amount of detergent is used, there is not much difference in washing result. It may cause damages to the garments because rinsing is not enough.
- The bleaching agent may cause damages to garments since it is strong alkali.
- Do sufficient rinsing because the powder detergent is easily remained on the garments causing bad odors.
- If too much detergent is used or cold water is used, it doesn't dissolve completely and remain on the garments, hose or spin basket, causing contamination on clothes.
- In case of reserved washing, detergents must be put in the detergent box. If the powder detergents are spread on laundry directly, it may cause discoloration.

SW70W9XFP-02961E-01_EN.indd 7 2012-12-18 7:09:32

CARING FOR CLOTHES BEFORE WASHING

Take out personal belongings from pockets.



- Caution, Check the pockets! Hairpins and coins cause damages to clothes and washing machine. They make noise and problems to the machine. Must check the pocket.

If pants zippers are open while washing, the spin basket may be damaged. The zipper should be closed and fixed with a string before washing.

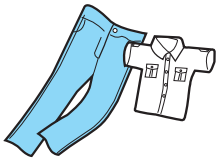

- Metal on the clothing may cause damage to the clothes and the tub.
- Turn clothing with buttons and embroidered clothes inside out before washing them.
- Clothing with long strings may become entangled with other clothes, and may cause damage to the clothing. Be sure to fix the strings before washing.

Waterproof clothes (Ski Wear, Diaper Covers, Footboards) are not allowed for washing.

- This may cause the laundry to be ejected or cause the washing machine to vibrate abnormally, which may result in personal injury or damage the washing machine, the floor or the clothing. (Diapers, waterproof clothing, raincoats, umbrella covers, skiwear, car cover sheets, and sleeping bags, etc.).
- When the tub rotates, water may become trapped in the waterproof clothing or fabric and can collect in a corner, causing abnormal vibrations. In addition, the laundry rises and may be ejected and cause personal injury.

Shake the dirt or soils from clothes.

- Soil and sands may rub delicate garments to cause damages and the washing result may be unsatisfactory.

Do pre-washing for white socks, sleeves, and collars before the main washing.

- For stains and dirt on collars, sleeves, hems, and pockets, apply some detergent to them and apply it lightly with a brush before washing.
- Use powdered or liquid detergent. Do not use soap as the tub may become dirty from the dirt on it.

Turn inside out for those nappy clothes before washing.

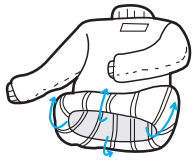

- If clothes have too much foreign matter, separate them for washing. Other clothes may pick up those dirty matters (dirt, thread).
- Wash black colored clothes and cotton towels separately. If they are washed together, towels may pick up dirty matters. Check before washing.

Cashmilon and those garments having big volume and lightweight (eg. Lasedecorated clothes, lingerie, nylon stocking, synthetic fabrics etc.) may rise and cause damages to the clothes and problems to the machine. Use the laundry net or wash them separately.

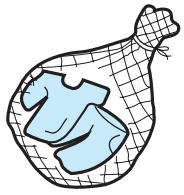

- Must put those long stringed clothes, lase-worked clothes, bed cover sheet, wool clothes into a laundry net before washing.
- Put delicate clothes in the laundry net.
- Use only those commercial laundry net for washing.

Curtains, floating garments or blue jeans shall be pressed not to float on the water.

- If they are floated on the water, press Start/Pause button to stop and press them to sock in the water. If the washing goes on with clothes floating on the water, it may cause damages to the clothes and the washing machine as well as unsatisfactory washing result.

SW70W9XFP-02961E-01_EN.indd 8 2012-12-18 7:09:32

HOW TO WASH AUTOMATICALLY DEPENDS ON THE LAUNDRY

Before starting washing, check the following;

- Connect the water supply hose to the water tap. Leave a tap open. Plug the power cord in. Make sure to lay down the drain hose.

Washing for the first time

Before washing clothes for the first time, you must run a complete cycle without clothes.

To do this:

1. Press the **Power** button.
2. Open the detergent drawer and insert a little detergent.
3. Turn on the water supply to the washing machine.
4. Press the **Start/Pause** button.
   This will remove any water from the manufacturer's test run remaining in the machine.

Special notes!

Automatic Sensing Function

- According to the selected program, the amount of laundry is automatically sensed and then the appropriate water level, wash time, rinse cycle, and spinning time are automatically selected for the automatic wash.
- After the power is on, a program is selected and **Start/Pause** button is pressed. Then, the washing board starts spinning without water. This action senses how much laundry is in the washing basket, not a machine problem. After this sensing process, water supplies automatically.

Adding Detergent and Softener

- It senses the amount of laundry and indicates the water level and amount of detergent. Then, it starts water supply right away.
- During the water supply, it is possible to open the detergent box and add detergent. However, it is better to press **Start/Pause** button to stop water supply and add detergent. Close the lid and press **Start/Pause** button again. This way is much more convenient.
- If the softener is inserted in the softener dispenser, it automatically adds in at the last rinsing cycle.

Put the laundry into the washer and add detergent, too.

- Be careful not to overload. Use right detergent for the fabrics you are washing.

- If the lid is open while running, the washing machine is stopped automatically for safety. (Except, water supply continues while the lid is open.)
- When hot water is selected, both cold and hot water are supplied for the first 20 seconds in order to protect the clothes.
- Possible to control the washing time, rinsing cycle, and spinning time at every program during the washing.

SW70W9XFP-02961E-01_EN.indd 9 2012-12-18 7:09:32

setting up your washer

CONTROL PANEL

For more details, see control panel of your washing machine.

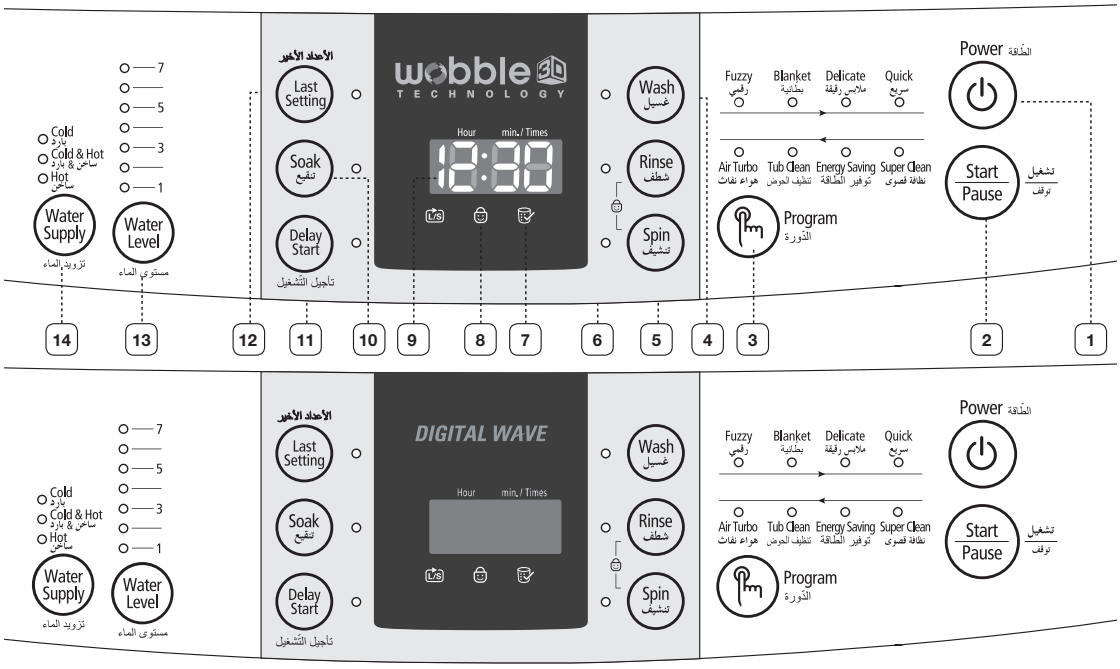

1 POWER BUTTON	Press this button once to operate. Press it again to turn the power off.
2 START/PAUSE BUTTON	Use to pause and restart the operation. To change the washing procedure during an operation, press this button to stop, and again to restart after changing the procedure.
3 PROGRAM SELECT BUTTON	Each time the button is pressed, the washing program changes; Fuzzy → Blanket → Delicate → Quick → Super Clean → Energy Saving → Tub Clean → Air Turbo
4 WASH BUTTON	Press this button to perform a wash only or to adjust the washing time. You can set the wash time from between 4 to 30 minutes.
5 SPIN BUTTON	Press this button to perform a spin cycle only or to adjust the spin time. You can set the spin time from between 0 to 9 minutes. When only a spin is selected, the spin time will be different from the total remaining time. This is because the total remaining time includes the actual spin time and the times for water draining and stopping.
6 RINSE BUTTON	Press this button to perform a rinse only or to adjust the rinse count. You can set the rinse count up to five times.
7 TUB CHECK FUNCTION Tub Check /	If the Tub Check indicator on the display blinks (it blinks for 3 minutes), run the Tub Clean course. The Tub Clean function removes dirt from the tub to keep the laundry clean.

SW70W9XFP-02961E-01_EN.indd 10 2012-12-18 7:09:33

8 **CHILD-LOCK FUNCTION** /	This is a device to protect children from being accidentally hurt while playing with the washer. • How to start the Child-Lock function: - Press the “Power” button to go to an initial washing mode. - By pressing “**Start/Pause**” button, you start washing and in case Child Lock function is needed during the laundry - Press both the “Rinse” and “Spin” buttons at the same times.(for 3 seconds) (Note: You cannot perform the function without the “Power” button on.) • To release the function of Child-Lock: In case the “Child-Lock” is programmed, press both the “Rinse” and “Spin” buttons at the same time.
9 **REMAINING TIME, DELAY START TIME, ERROR DISPLAY**	Displays the remaining wash time. Displays the reserved delay start time. Displays the error state if a problem occurs in the washing machine so that you can take action.
10 **SOAK BUTTON**	Press this button to perform a soak wash. You can set the soak time from between 10 to 60 minutes.
11 **DELAY START BUTTON**	Press this button to finish the wash at a specified time. Turn off your washing machine to cancel a reserved delay start. You can set the delay start time from between 3 to 19 hours.
12 **LAST SETTING**	Press this button to load the settings for the last course. Perform a wash course using the last used settings without having to enter them manually again. Your choices are automatically saved when you press the Start/Hold button. To use a memorized course, press the Last Settings button and then press the Start/Hold button. - The memorized functions will be displayed on the panel. CAUTION The Delay start and Water level settings are not automatically saved and will be reset after the wash.
13 **WATER LEVEL BUTTON**	The water level is automatically adjusted. However, you can select the water level manually by pressing this button.
14 **WATER SUPPLY BUTTON**	Each press of the button cycles through the type of water, Cold → Cold + Hot → Hot → Cold

SW70W9XFP-02961E-01_EN.indd 11 2012-12-18 7:09:33

setting up your washer

FUZZY PROGRAM

Selects the best washing program automatically.

1. Press the **Power** button to "**On**".
2. Press the **Start/Pause** button.
   Water level is selected automatically. Washing rinsing, and spinning follow.
   If you want to pause, press the **Start/Pause** button again. You can change the program when paused.
3. Close the lid.

BLANKET PROGRAM

(Big volume laundry like blanket and bed cover sheets)

1. Press the **Power** button to "**On**".
2. Press the **Program** select button once.
3. Press the **Start/Pause** button.
   Washing, rinsing, and spinning follow. If you want to pause, press the **Start/Pause** button again. You can change the program when paused.
4. Close the lid.

- Fold those big volume laundry (blanket and bed cover sheets) in the following way before adding into the spin basket.
- Do not wash the electric blanket and carpets.
- Get a laundry net for those light and big volume laundry (eg. Cashmeres) because they might rise in the water and get damaged.

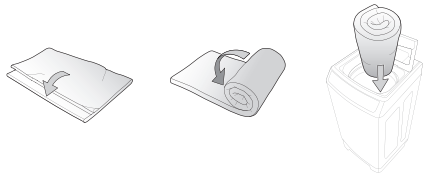

When you wash unwieldy laundry items (e.g. blankets, winter clothes, etc.) add the detergent before you add the laundry to utilize the up, down, left and right 3D 4-directional stereo wash provided by Wobble Technology™ for a better result.

DELICATE PROGRAM

Washable sweater, cardigan, delicate clothes etc.

1. Press the **Power** button to "**On**".
2. Press the **Program** select button two times
3. Press the **Start/Pause** button.
   Washing, rinsing, and spinning follow. If you want to pause, press the **Start/Pause** button again. You can change the course when paused.
4. Close the lid.

CAUTION

- You can only select cold water.
- The last spin operates lightly to prevent wrinkles.
- Use the detergent indicated in the laundry.

QUICK PROGRAM

If you want to wash those frequently used towels or less dirty laundry time.

Because washing is speedy, it is good for light or less stained laundry.

1. Press the **Power** button to "**On**".
2. Press the **Program** select button three times.
3. Press the **Start/Pasue** button.
   Water level is selected automatically. Washing, rinsing, and spinning follow. If you want to pause, press the **Start/Pasue** button again. You can change the program when paused.
4. Close the lid.

SW70W9XFP-02961E-01_EN.indd 12 2012-12-18 □□ 7:09:33

SUPER CLEAN PROGRAM

Use for cleaner washing.

1. Press the **Power** button to "**On**".
2. Press the **Program** select button four times.
3. Press the **Start/Pause** button and put the proper amount of detergent into tub. Water level is selected automatically.
4. Close the lid.

ENERGY SAVING PROGRAM

Use this course to save energy.

1. Press the **Power** button to "**On**".
2. Press the **Program** Select button five times
3. Press the **Start/Pause** button and put the proper amount of detergent into tub.
4. Close the lid.

TUB CLEAN PROGRAM

Use this program to clean the tub. It will keep the tub clean and sanitary.

1. Press the **Power** button to turn the washer "**On**".
2. Press the **Program** selection button six times.
3. Press the **Start/Pause** button.
4. Add a delicated detergent and close the lid

- Never place laundry in the tub when cleaning inside the tub, as this can cause discoloration or damage to the laundry.
- When doing the laundry after cleaning the tub, you may find some impurities. These are just detergent residues and impurities after the tub cleaning. Perform the rinse cycle two to three times.
- The water level is set to Mid early on and then changed to High during the rinse.

AIR TURBO PROGRAM

This course saves you valuable time, ensuring that your clothes dry faster than from line drying.

1. Press the **Power** button to "**On**".
2. Press the **Program** select button seven times.
3. Close the lid.
4. Press the **Start/Pause** button.

- Select this when you want to half-dry the laundry.

KEEPING THE TUB CLEAN

When using the machine under humid conditions for an extended time, various bacteria from the air may stick to the tub and form black dirt (fungi), causing damage to the human body.
To keep the tub clean and hygienic at all times, it is recommended detergents to clean the tub regularly at least once every one to three months.

CAUTION

- The Eco Tub Clean course even works without detergent.
- For this function, do not put laundry into the tub. This may cause the laundry to be damaged or the product to malfunction.
- Make sure to use only detergent for cleaning the wash tub when using detergent for this course.

SW70W9XFP-02961E-01_EN.indd 13 2012-12-18 7:09:33

DELAY START

How to reserve washing?

Select this program when you have to go out or do something else.

1. Press the **Power** button to “On”.
2. Press the **Delay Start** button once.
   You may change the delay start time with use the **Delay Start** button. (from 3 hours to 19 hours)
3. Press the **Start/Pause** button and put the proper amount of detergent into tub.
4. Close the lid.
   The washing finishes by the time you reserved. Add detergent and softener in proportion to the water level. Then, close the lid.
   - Must add the detergent in the detergent box.
   - If the detergent is spread on the laundry directly, some clothes may get discolored as the start delays.
   - If the Delay Start needs to be canceled, press the Power button.
   - The reserved finish time may be changed depends on the water pressure.

CHILD LOCK

This function is for protecting children, the elderly and the frail.

1. Press the Power button.
2. To activate the Child Lock function, press and hold both the Rinse and Spin buttons down simultaneously for 3 seconds. (If the Child Lock function is activated, the Child Lock icon blinks.)
3. Operations after activating the Child Lock function.
   - Even if the Child Lock function is activated, every button works until the door opens.
   - When you open the door during the Child Lock is being activated, the alarm sounds and an error message appears. In 30 seconds, draining begins automatically. However, if you close the door within 30 seconds, water will not be drained. (Displayed error message “CL”, “dE”).
   - To add laundry after activating the Child Lock function, you must deactivate the Child Lock function.
4. To deactivate the Child Lock function, press and hold both the Rinse and Spin buttons simultaneously for 3 seconds again. (If the Child Lock function is deactivated, the Child Lock icon is turned off.)
5. To clear “CL” display, after draining is complete, close the door of the washing turn the power off and then on.

CAUTION

- This function is for preventing injury and malfunction of the product because of inappropriate operations or actions by children, the elderly or the frail.
- If the door opens when the Child Lock function is activated, the water is drained by force to prevent children from drowning.
- To add laundry after activating the Child Lock function, you must deactivate the Child Lock.
- Even if the power is turned off and then on when the Click Lock is activated, the Child Lock remains activated.

- Once Child Lock is activated, even when the power is turned off, if the door is opened, water is automatically drained in 30 seconds.
- The Child Lock function cannot be deactivated when CL is displayed. (However, the Child Lock function can be deactivated when the dE error is displayed.)

SW70W9XFP-02961E-01_EN.indd 14 2012-12-18 7:09:33

manual functions

Possible to select the function for each program.
(Example) For a simple washing as the little dirt program :
Power → Select the little dirt program → Wash → Start/Pause

WASH ONLY 	Press the **Power** button. Press the **Wash** button. Press the **Start/Pause** button. Washing goes on for 1 time. When the **Wash** button is pressed during washing, the wash time can be changed to between 4 and 30 minutes in duration.
RINSE ONLY 	Press the **Rinse** button. Press the **Start/Pause** button. Rinsing goes on for 1 times. When the **Rinse** button is pressed, the rinse times can be changed to between 1 to 5 times in duration.
SPIN ONLY 	Press the **Spin** button. Press the **Start/Pause** button. Spin drying goes on for 4 minutes. When the **Spin** button is pressed, the spin time can be changed to from 0 to 9 minutes. If 0 minutes is selected, the cycle is terminated after a drain cycle only without the spin cycle being performed.
WASH AND RINSE 	Press the **Wash** and **Rinse** button. Press the **Start/Pause** button once. Detects the amount of laundry, and determines wash and rinse time period automatically. When the **Wash** and **Rinse** button is pressed, wash time period is determined between 4 and 30 minutes, and rinse time is determined between 1 and 5 times.
RINSE AND SPIN 	Press the **Rinse** and **Spin** button. Press the **Start/Pause** button once. Rinsing and spin drying follow. When the **Rinse** and **Spin** button is pressed, the number of rinse times is determined between 1 and 5, and spin time period for drying is determined between 0 and 9 minutes.
WASH, RINSE AND SPIN 	Press the **Wash**, **Rinse** and **Spin** button. Press the **Start/Pause** button once. **Wash**, **Rinse** and **Spin** is performed.

SW70W9XFP-02961E-01_EN.indd 15 2012-12-18 7:09:34

installation & maintenance

The User's Manual is for common use.
Make use of the User's Manual depending upon your washing machine model.

ENVIRONMENT

Leave some space
Maintain at least 10cm between the washer and the wall.
Place the washer on a sturdy flat surface.
If the washer is placed on an uneven or weak surface, noise or vibration occurs. (Allowable is 1°)
Adjust the legs for even placement.
Never install the washer near water.
Do not place the washer in steamy rooms or where the washer is directly exposed to rain. Moisture may destroy the electrical insulation causing an electrical shock hazard.
Avoid direct sunlight or heaters.
As plastic an electrical components are affected by direct heat, never place the washer near furnaces, boilers, etc. Do not place under direct sunlight.

LEVELLING

- If the washer is not leveled with the ground, it makes the machine tremble more or be out of order. So, make sure that the washer is leveled properly.

SEE IF THE MACHINE IS PLACED LEVEL BY CHECKING THE POSITION OF THE WASHING TUB.

- Open the lid of the machine, pour water into the tub up to the level just below the pulsator, and adjust the legs so that the pulsator is positioned at the center of the water as shown in the figure.
- Place the machine more than 10cm away from the wall.
- Adjust the legs on feet for levelling.

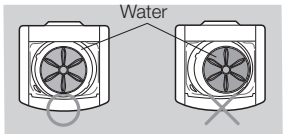

CONNECTING THE WATER SUPPLY HOSE

1. Remove the adaptor from the water supply hose.



2. First, using a "+" type screw driver, loosen the four screws on the adaptor. Next, take the adaptor and turn part(b) following the arrow for gap about 5 mm between them.

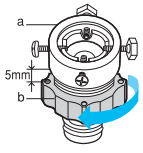

3. Connect adaptor to the water tap by tightening the screws firmly. Then, turn part(b) following the arrow and put (a) and (b) together.

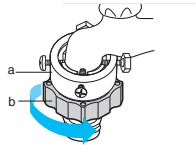

SW70W9XFP-02961E-01_EN.indd 16 2012-12-18 7:09:35

4. Connect the water supply hose to the adaptor. Pull down the part (c) of the water supply hose. When the part (c) is released, the hose is automatically connected to the adaptor making a 'click' sound.



5. Connect the other end of the water supply hose to the inlet water valve at the back of the washer. Screw the hose clockwise all the way in.

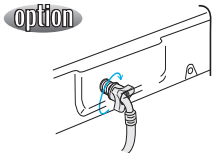

5-1. Connect the other end of the water supply hose to the inlet water valve at the top of the washer. Screw the hose clockwise all the way in.

- If the water tap is a screw type, assemble a water supply hose that fits to the tap as shown. After completing connection, if water leaks from the hose, then repeat the same steps.

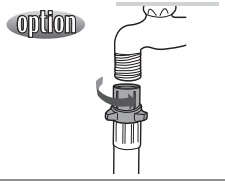

After completing connection, if water leaks from the hose, then repeat the same steps.
Use the most conventional type of faucet for water supply.
In case the faucet is square or too big, remove the spacing ring before inserting the faucet into the adaptor.

SW70W9XFP-02961E-01_EN.indd 17 2012-12-18 7:09:36

installation & maintenance

ASSEMBLING THE RAT PROTECTION PANEL (OPTION)

Tilt the washer a little and lift up the panel until it clicks, finally fix the panel with screw to the base as shown in the figure.

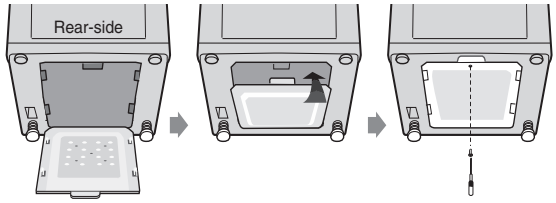

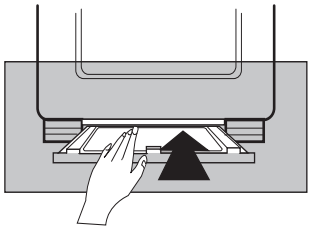

1. Insert the rat protection panel to the assembling hole on back side to the end.

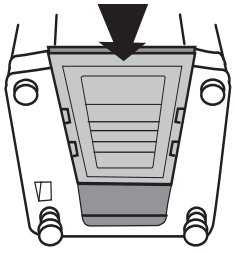

2. If you have difficulty inserting the panel lift up the washer a little and insert it.

HOW TO CONNECT THE DRAIN HOSE (OPTION)

IN CASE OF PUMP-DRAINED WASHER

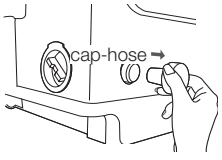

Take out the cap-hose and connect the outlet-hose.

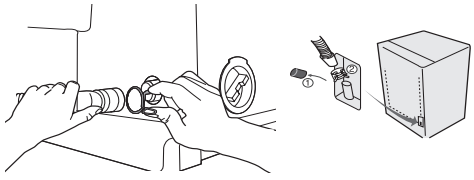

Be sure to join tightly the drain hose into the drainoutlet on the back of the machine.

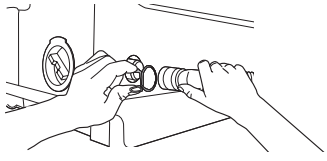

Be sure to join tightly the drain hose into the drain-outlet on the side of the machine.

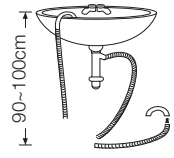

Install the drain hose in the position of about 90~100cm above the ground.

SW70W9XFP-02961E-01_EN.indd 18 2012-12-18 7:09:37

IN CASE OF GENERAL WASHER

1. After pressing the joint ring, insert to the drain hose.

2. After directing the drain hose to a drain, join to the drainoutlet of the washing machine.

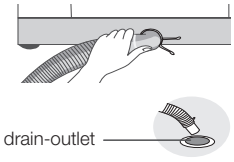

3. Be sure to join them tightly by pressing the joint ring and pushing it into the drain-outlet.

- The length of drain hose is adjustable so that you can extend the length appropriately.



HOW TO CHANGE THE DRAIN HOSE DIRECTION

- The handle of joint ring is pressed to pull out the drain hose. Change the direction of the drain hose and follow the above guideline again.

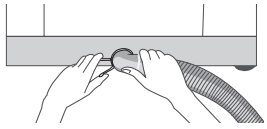

CAUTIONS WHEN INSERTING THE DRAIN HOSE

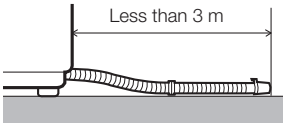

1. Don't exceed more than 3m when the drain hose is used by connecting with other hoses.

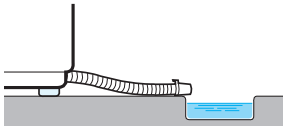

2. Be careful to drain water out at the end of the drain hose.

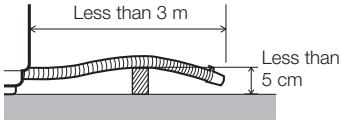

3. The doorsill shoudn't be more than 5cm.

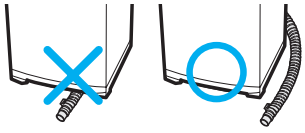

4. Don't install the drain hose underneath the wash machine.

SW70W9XFP-02961E-01_EN.indd 19 2012-12-18 7:09:37

Adjusting the height of the washer

Make sure your washer is level by adjusting the leveling legs.

Beware of catching your hands under the legs.

1. Pull the handles located at the right and left front of the washer and slide them off.
2. Adjust the height of the washer upwards or downwards.
3. When you have finished adjusting the height, push the handles back to fix the adjusting legs in place.

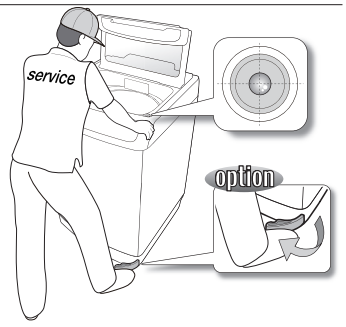

Waterdrop mark	Cause	How to level
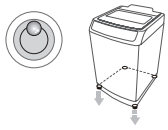	The front of the washer is lower	Level the washer by adjusting the legs.
	The back of the washer is lower	Adjust the height by using the props at the back.
	The left of the washer is lower	Adjust the left side by using the adjustable legs at the front and props at the back.
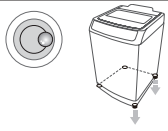	The right of the washer is lower	Adjust the left side by using the adjustable legs at the front and props at the back.

Leveling your washer with the leveling screws (Optional)

1. Gently lift up the washer and turn the adjustable legs to the left to find the optimal balance.

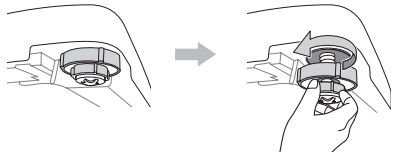

2. When done, return the washer to its original position.

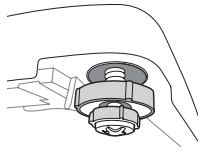

3. After adjusting the legs, do not forget to lock the nut for safety reasons. (Failing to do so may cause it to become loose and and move out of position.)

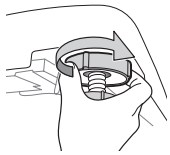

Test run
Make sure that you install your washing machine correctly by running the **Rinse**+**Spin** cycle after the installation is complete.

SW70W9XFP-02961E-01_EN.indd 20 2012-12-18 7:09:39

ADDING DETERGENT

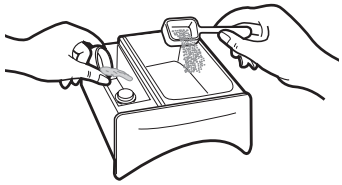

1. Open the detergent drawer and then add the powder detergent into the detergent compartment.
2. Add detergent evenly so that it doesn't brim over the edge of the drawer.
   - Use a reasonable amount of detergent.
     If you use more detergent than the standard quantity or the water temperature is too low and the detergent does not dissolve in the water completely causing it to remain on the laundry and in the hose and tub, it may cause damage such as dirtying and discoloring the laundry.
   - If you use a powder detergent and it remains on the laundry, it may cause a bad odor. Rinse the laundry sufficiently in fresh water.

CAUTION If you spread a powder detergent over the laundry directly, it may result in discoloration. Make sure to insert it into the detergent compartment.

If the water pressure is low, the detergent may remain in the detergent compartment.

ADDING FABRIC SOFTENER

1. When the proper amount (one time dose) of fabric softener is stored in the softener inlet, it is automatically added during the last rinse cycle.
2. Do not add detergent, bleach or starch into the softener inlet.
3. Using too much softener may produce unsatisfactory results.
4. Do not open the lid during the Spin cycle. If added too early, its effectiveness will decrease.
5. Do not leave the softener in the softener dispenser for a long time as it may congeal.

If the water pressure is low, the fabric softener may remain in the softener compartment. In this case, put the fabric softener into the tub directly.

SW70W9XFP-02961E-01_EN.indd 21 2012-12-18 7:09:39

WATER SUPPLY CONNECTOR FILTER

1. Pull out the filter and wash well.

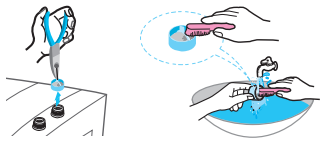

2. Pull in the filter and connect the hose to the inlet water valve tightly.

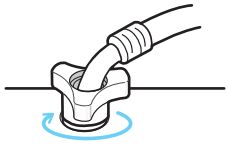

3. Check if there is a leakage.
   Note to tighten up the connector.

CLEANING THE FILTER

Clean the filter net often to keep the washer clean.

1. Push the upper part of the Hygiene filter and pull in.

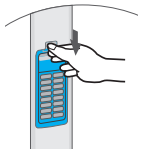

2. Open the cover as shown in the figure.

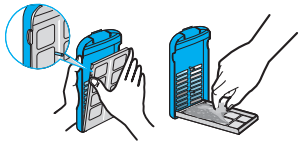

3. Clean the Hygiene filter.

4. Close the cover and insert the lower part of the filter in the basket first and then push the filter with “click” sound.

SW70W9XFP-02961E-01_EN.indd 22 2012-12-18 7:09:40

CLEANING THE PUMP FILTER (OPTION)

1. Place a rag or towel under the wash filter to avoid wetting the floor, and rotate the filter counterclockwise and pull it out.
2. Remove any dirt from the filter.
3. Return the filter to its place by rotating the filter clockwise until it locks into position.

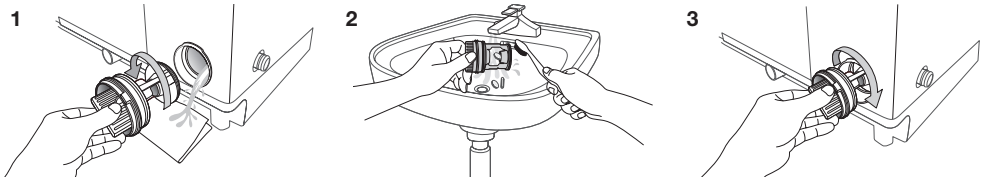

CLEANING THE DETERGENT COMPARTMENT

1. Separate the detergent compartment from the washer.
2. Separate and clean the Rinse-Cap from the detergent compartment.
3. Assemble the Rinse-Cap and insert the detergent compartment into the washer.

SW70W9XFP-02961E-01_EN.indd 23 2012-12-18 7:09:40

troubleshooting

PROBLEM	CHECK
Washing machine won't work	• Is the water tap opened? • Is the washer plugged in? • Is the power cut off? • Is there enough water?
Water dose not drain 	• Is the drain hose down?(No pump) • Is the drain hose frozen? • Is the drain hose clogged? • If the water dose not drain in 30 minutes, a buzzer will sound, and the remaining time indicator will show "5E".
Water is not supplied 	• Is the water tap opened? • Is the water cut off? • Is the water supply hose or hose connection clogged? • Is the water tap frozen? • If the water supply is not finished in 1 hour or there is no change in the water level 5 minutes (10minutes for some models) after the water supply has started, the buzzer rings and "4E" is displayed on the remaining time indicator.
Spinning does not work 	• Is the laundry spread out evenly in the washer? • In the washer set on a sturdy flat surface?
Water is overflowed 	• Restart after spinning. • If the error sign still indicates, call agency.
This indicates that a Child Lock error occurred 	• The error message blinks at a 1 second interval and the water is drained with an alarm sound. (Displayed message: "CL" or "dE") • This function is to prevent children from drowning when falling into the wash tub. When draining is complete and you turn the power off and then on, the washing machine will operate normally. • To clear "CL" display, after draining is complete, close the door of the washing machine, turn the power off and then on.
Water leakage error 	• Check if the end of the drain hose is placed on the floor. (The hose should be hung over the pump - hose guide.) • Check if the drain hose is clogged by any foreign substances. • If the error remains, call the service center.

SW70W9XFP-02961E-01_EN.indd 24 2012-12-18 7:09:41

washing machine won't work?

PROBLEM	CHECK
The power is cut off.	Is the electric voltage normal?
	Is the washer plugged in? Plug in the electric cord. ➲ Water does not drain.
	Is the drain hose down? Put the drain hose down.
	Is the drain hose folded? Unfold the drain hose.
	Is the drain hose outlet clogged? Remove the waste cleanly.
Washing machine won't work.	Is the washer lid open? ➲ Close the lid.
	Is the Pause button on? ➲ Press the Start/Pause button one more time and check if the washer starts.
	Is enough water filled to the water level? ➲ If the water pressure is low, it takes a long time to start washing.
	Is the faucet closed? ➲ Open the faucet to supply water.
If the drain hose and spin basket are frozen, do as follows.	• Add hot water to the frozen water tap and remove the drain hose. Soak into hot water. • Pour hot water into the spin basket for about 10 minutes. • Put a hot water towel on the drain hose connector. • If the drain hose defrosts, connect again and check for proper water draining.
The water drains out immediately.	• The drain is clogged with coins or pins. The drain hose is hung over the drain hose hook. Half fill the spin basket with water and try for spinning again.
The water leaks at the water supply hose connector.	If the faucet connecting part is loose, water may leak. ➲ Repeat the assembling steps again. (Refer to "Connecting the water supply hose")
	Check if the rubber packing of water supply hose is in the right position. ➲ Screw tightly again.
	Is the water supply hose folded? ➲ Unfold the hose.
	If the water supply is too strong, water may leak. ➲ Close the faucet a little.
	Is water leaking from the faucet itself? ➲ Fix the faucet. Water is not supplied.
The water leaks at the water supply hose connector.	Did you press the Start/Pause button after selecting the water supply? ➲ If the Start/Pause button is not pressed, water is not supplied. Press the Start/Pause button.
	Is the faucet closed? ➲ Turn on the faucet.
	Is the filter net at the water supply hose connector clogged with dirty matters? ➲ Clean the filter net by brushing with a toothbrush.
	Is the water supply cut off? ➲ If the water supply is suspended, turn off the faucet and power off.
Spinning makes loud noises and vibrations.	Check if the laundry is spread evenly in the washer. ➲ Spread out the laundry evenly and start again.
	Check if the washing machine levels on a sturdy flat floor. ➲ Set the machine at level.
	Is the handle for leveling legs loose? ➲ Adjust the legs on the feet for leveling.
	Is around the washing machine filled with unnecessary stuffs? ➲ Remove those unnecessary things away from the wash machine.

SW70W9XFP-02961E-01_EN.indd 25 2012-12-18 7:09:41

specification

SW70W9

MAX. MASS OF DRY CLOTH IN kg	SW70W9	7.0 kg	STANDARD WATER LEVEL	7	74 *l*
POWER CONSUMPTION	WASH	470 W			
	SPIN	280 W		5	58 *l*
DIMENSIONS(mm)		W601XL654XH968(LOW BASE) W601XL654XH993(HIGH BASE)		3	50 *l*
WEIGHT		44 kg		1	38 *l*
WATER PRESSURE		0.05~0.78 MPa (0.5 ~ 8.0 kg·f/cm^2)	WATER USAGE		216 *l*
WASHING TYPE		Stirring Type	SPIN SPEED		720 rpm

SW80W9

MAX. MASS OF DRY CLOTH IN kg	SW80W9	8.0 kg	STANDARD WATER LEVEL	7	78 *l*
POWER CONSUMPTION	WASH	470 W			
	SPIN	280 W		5	58 *l*
DIMENSIONS(mm)		W601XL654XH968(LOW BASE) W601XL654XH993(HIGH BASE)		3	50 *l*
WEIGHT		44 kg		1	38 *l*
WATER PRESSURE		0.05~0.78 MPa (0.5 ~ 8.0 kg . f/cm2)	WATER USAGE		218 *l*
WASHING TYPE		Stirring Type	SPIN SPEED		720 rpm

SW70G9

MAX. MASS OF DRY CLOTH IN kg	SW70G9	7.0 kg	STANDARD WATER LEVEL	7	74 *l*
POWER CONSUMPTION	WASH	470 W			
	SPIN	280 W		5	66 *l*
DIMENSIONS(mm)		W601XL654XH968(LOW BASE) W601XL654XH993(HIGH BASE)		3	54 *l*
WEIGHT		44 kg		1	44 *l*
WATER PRESSURE		0.05~0.78 MPa (0.5 ~ 8.0 kg·f/cm^2)	WATER USAGE		156 *l*
WASHING TYPE		Stirring Type	SPIN SPEED		720 rpm

SW70W9XFP-02961E-01_EN.indd 26 2012-12-18 7:09:41

SW80G9

<table>
<tr><td rowspan="2">MAX. MASS OF DRY CLOTH IN kg</td><td rowspan="2">SW80G9</td><td rowspan="2">8.0 kg</td><td rowspan="5">STANDARD WATER LEVEL</td><td rowspan="2">7</td><td rowspan="2">78 l</td></tr>
<tr><td rowspan="2">POWER CONSUMPTION</td><td>WASH</td><td>470 W</td></tr>
<tr><td>SPIN</td><td>280 W</td><td>5</td><td>69 l</td></tr>
<tr><td colspan="2">DIMENSIONS(mm)</td><td>W601XL654XH968(LOW BASE)
W601XL654XH993(HIGH BASE)</td><td>3</td><td>54 l</td></tr>
<tr><td colspan="2">WEIGHT</td><td>44 kg</td><td>1</td><td>38 l</td></tr>
<tr><td colspan="2">WATER PRESSURE</td><td>0.05~0.78 MPa
(0.5 ~ 8.0 kg . f/cm2)</td><td colspan="2">WATER USAGE</td><td>158 l</td></tr>
<tr><td colspan="2">WASHING TYPE</td><td>Stirring Type</td><td colspan="2">SPIN SPEED</td><td>720 rpm</td></tr>
</table>

✻ The energy label specifications have been determined by using the following program accordiing to SASO 2692 and SASO 2693.

- The program for SW70W9 / SW80W9 / SW70G9 / SW80G9 is Energy Saving + High Water Level + Cold&Hot.

SW70W9XFP-02961E-01_EN.indd 27 2012-12-18 □□ 7:09:41

QUESTIONS OR COMMENTS?

Country	CALL	OR VISIT US ONLINE AT
Saudi Arabia	9200-21230	www.samsung.com/ae (English) www.samsung.com/ae_ar (Arabic)

Code No. DC68-02961E-01_EN

SW70W9
SW80W9
SW70G9
SW80G9

غسالة أوتوماتيك
دليل المستخدم

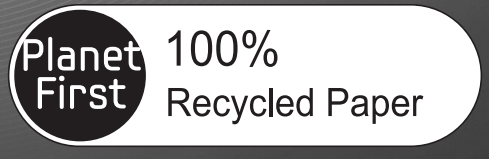

تم تصنيع هذا الدليل من ورق معاد تدويره بنسبة ١٠٠٪.

تخيل الإمكانات الهائلة

شكراً لشرائك أحد منتجات Samsung.
للحصول على خدمة أكثر تكاملاً، الرجاء تسجيل المنتج على الموقع

www.samsung.com/register

SAMSUNG

كود رقم: DC68-02961E-01_AR

SW70W9XFP-02961E-01_AR.indd 1 12/18/2012 7:06:05 PM

الميزات

- **ميزة الإعدادات الأخيرة**

يعمل هذا الخيار على تحميل إعدادات الدورة السابقة.

تحتفظ ميزة "الإعدادات الأخيرة" تلقائيًا بآخر دورة تم تشغيلها، مما يجعل من الممكن استخدام الإعدادات نفسها التي استخدمتها الغسالة في المرة الأخيرة دون الحاجة إلى تحديد جميع الإعدادات يدويًا.

- **حاوية ماسية الشكل**

تُحدث الحاوية الماسية ضغطاً عالياً من الماء مما يعمل على إزالة الأوساخ من الملابس بشكل فعّال. تقلل الحاوية الماسية من إلحاق الضرر بالأقمشة مما يعمل على زيادة عمر الأقمشة. تتميز الأنبوبة الداخلية البراقة بروعتها وقوتها في تأثيرها على الغسيل.

- **التحكم الرقمي**

تعمل ميزة التحكم "الرقمي" على تشغيل أفضل دورة غسيل من خلال تقدير حِمل الملابس فيما يشبه الذكاء الاصطناعي.

- **باب شفاف مقوى**

يتيح لك رؤية ما يحدث أثناء تشغيل الغسالة، كما يمكنك التحقق من تقدم عملية الغسل في أي وقت.

- **الموجات الاقتصادية**

تساعد المضخة القوية على إنشاء تيار ماء شديد، مما يؤدي إلى زيادة السرعة عن طريق دوران المضخة الموجودة في المنتصف حيث تميل بزاوية ٣٦٠ درجة. كما يعمل تأثير تدفق المياه على زيادة سرعة دوران المياه للحصول على غسيل أكثر نظافة بمجرد استخدام كمية قليلة من المياه. (أداء أفضل لعملية الغسل.)

- **رجرجة الغسيل (اختياري)**

تعمل الغسالات الفوق أوتوماتيكية التقليدية على تدوير الملابس في اتجاه عقارب الساعة أو عكس اتجاه عقارب الساعة في اتجاهين فقط. إلا أن تقنية الرجرجة ™Wobble Technology تعمل على تدوير الملابس عن طريق دفعها بقوة في ثلاثة اتجاهات.

ونظرًا لأن تقنية ™Wobble Technology تعمل على تحريك الملابس أفقيًا ورأسيًا في الوقت نفسه، فإن تدفق ماء الغسيل قد يبدو مختلفًا عن غسالات الملابس الأخرى.

تعد عملية الغسل في مستويات مياه متعددة أحد ميزات وظيفة الغسل في ثلاثة اتجاهات بتقنية ™Wobble Technology، وقد تتضمن هذه العملية القيام بدورة الغسل عند مستوى ماء منخفض.

- **المصفاة الفعالة**

تضمن لك هذه "المصفاة الفعالة" الفريدة حجز جميع النسالات الموجودة داخل حوض الغسيل، مما يرفع كفاءة عملية التصفية للحصول على نتائج فعّالة للتنظيف.

- **وظيفة التأمين ضد عبث الأطفال**

يساعد هذا الجهاز على حماية الأطفال من التعرض للأذى دون قصد أثناء اللعب بالغسالة. (للحصول على مزيد من المعلومات، راجع الصفحتين ١١ و١٤.)

- **تنظيف الحوض بطريقة اقتصادية (ميزة اختيارية) - تنظيف فائق وتنظيف فعّال**

تم ابتكار ميزة "تنظيف الحوض بطريقة اقتصادية" من Samsung خصيصًا لإزالة الأوساخ والوبر من الحوض دون استخدام منظف كيميائي مخصص، حيث تقوم هذه الوظيفة المبتكرة بالحفاظ على الحاوية نظيفة للغاية عن طريق النقع والدوران باستخدام المياه فقط.

- **توفير المياه (ميزة اختيارية)**

تعمل وظيفة "توفير المياه" المبتكرة من Samsung على تقليل إهدار المياه عن طريق إعادة استخدام مياه الشطف المتبقية، فبعد شطف الملابس في المرحلة الأخيرة من عملية الغسل، تحافظ الغسالة على المياه قبل عملية التجفيف النهائية واستخدامها مرة أخرى من أجل توفير المياه والمال.

(يمكنك استخدام هذه الوظيفة فقط عند تحديد عمليتين للشطف)

- **توفير الطاقة**

باستخدام هذه الدورة، يمكنك توفير الطاقة التي تستهلكها الغسالة.

تمت المصادقة على اختبار أداء الغسالة والفاقد منها من قبل الهيئة المعنية المسجلة.

SW70W9XFP-02961E-01_AR.indd 2 12/18/2012 7:06:05 PM

إرشادات من أجل السلامة

الرجاء ملاحظة أن احتياطات السلامة التالية تهدف إلى تجنب التعرض للأخطار أو الأضرار غير المتوقعة وذلك عن طريق المساعدة في الاستخدام الملائم من أجل السلامة.

عند استخدام الماء الساخن في الغسيل، الرجاء التأكد أن درجة حرارة الماء لا تتعدى ٥٠ درجة مئوية.

- قد تتعرض الأجزاء البلاستيكية للتشوه أو التلف، وقد تحدث صدمات كهربية أو حريق.

تحذير

قد تحدث إصابات بالغة أو حوادث مهلكة في حالة خرق هذه التعليمات.

- في حالة تلف القابس (سلك التيار الكهربي)، يجب تغييره من قِبل الشركة المصنّعة أو وكيل الصيانة الخاص بها أو أي فني مؤهل لتفادي التعرض لأي خطر.
- لا تنزع سلك التيار أو تلمسه بأيدٍ مبتلة.
  - قد تحدث صدمة كهربية أو ينشب حريق.
- لا تحاول ثني سلك التيار بالقوة أو الضغط عليه بأشياء ثقيلة.
  - قد تحدث صدمة كهربية أو ينشب حريق.
- لا تضع الغسالة بالقرب من أدوات كهربائية ولا تضع موقد شمعة أو سجائر فوق الغسالة.
  - قد يحدث حريق.
- لا تضع يديك أو أي أدوات معدنية أسفل الغسالة أثناء التشغيل.
  - قد تتعرض للأذى عن طريق لوح الدوران الموجود أسفل الغسالة.
- ابتعد عن الغسالة عندما يكون قاع الغسالة مغمورًا بالماء.
  - قد تحدث صدمة كهربية. الرجاء الانتظار حتى يتم تصريف الماء بشكل كامل.
- لا تضع ملابس ملطخة بالجازولين أو البنزين أو الكحول في الغسالة، واحتفظ بتلك الملابس بعيداً عن الغسالة.
  - قد يحدث انفجار أو ينشب حريق.
- أثناء التنشيف، لا تضع يديك في حوض التنشيف.
  - قد تتعرض يداك للأذى. في حالة عدم توقف الغسالة عن العمل في غضون ١٥ ثانية بعد فتح الغطاء، اتصل بوكيل الصيانة على الفور.
- هذا الجهاز غير مخصص للاستخدام بواسطة الأطفال الصغار أو الأشخاص ذوي الاحتياجات الخاصة ما لم يخضعوا لإشراف شخص مسؤول للتأكد من إمكانية استخدامهم للجهاز بشكلٍ آمن.
  ويجب أن يخضع الأطفال للإشراف لضمان عدم عبثهم بالغسالة.
- يجب أن يتم توصيل هذا الجهاز بمأخذ قوي الاحتمال لضمان استهلاك الطاقة على نحو مناسب.
- يجب وضع الغسالة بعد تركيبها بالقرب من مأخذ التوصيل بحيث يسهل الوصول إليه.
- لا يوجد بداخل الغسالة أجزاء يمكن للمستخدم إصلاحها بنفسه، لذا، يجب الاستعانة بفني صيانة مؤهل للقيام بأعمال الصيانة.
  - وإلا فقد يحدث خطأ ميكانيكي أو صدمة كهربية أو ينشب حريق أو يحدث تلف مادي.
  - لا يسري ضمان المنتج على المشاكل الناجّة عن فكه.
- لا تستخدم هذا المنتج للأغراض التجارية.
- بخصوص الغسالات التي تحتوي على فتحات تهوية بقاعدتها، يجب ألا تعوق المفروشات الأرضية هذه الفتحات.

SW70W9XFP-02961E-01_AR.indd 3 12/18/2012 7:06:05 PM

إرشادات من أجل السلامة

تنبيهات

قد تتعرض لإصابات خفيفة أو أضرار طفيفة في حالة خرق هذه الإرشادات.

- لا تقم بتركيب الغسالة في منطقة رطبة أو خارج المنزل حيث يتساقط المطر أو الجليد.
  - قد تحدث صدمة كهربية أو ينشب حريق.
- الرجاء فصل سلك التيار الكهربي عند عدم استخدامه.
  - قد تحدث صدمة كهربية أو ينشب حريق.
- في حالة وجود أتربة أو ماء على قابس التيار الكهربي والجزء المتصل به، الرجاء إزالته بالكامل.
  - قد تحدث صدمة كهربية أو ينشب حريق.
- لا تجعل أطفالك ينظرون داخل الغسالة.
  - إذا سقط الأطفال داخل الغسالة، قد تكون حياتهم عرضة للخطر.
- قم بالتهوية على الفور دون لمس القابس في حالة تسرب الغاز.
  - قد تحدث صدمة كهربية أو ينشب حريق في حالة اشتعاله.
- إذا أحدثت الغسالة صوتًا غريبًا، أو أخرجت رائحة غير عادية أو دخانًا، قم بفصلها بسرعة واتصل بوكيل الصيانة.
  - قد تحدث صدمة كهربية أو ينشب حريق.
- عند تنظيف الغسالة، لا ترش الماء على أجزاء الغسالة بشكل مباشر.
  - قد يؤثر ذلك على عمر الغسالة.

  وقد تحدث أيضًا صدمة كهربية أو ينشب حريق.
- لا تقم باستخدام منظف يحتوي على حمض قوي.
- لا تقم بتوصيل عدة أجهزة في آن واحد بمصدر تيار كهربي واحد.
  - قد يحدث حريق بسبب الحرارة الزائدة.
- لا تضغط الزر بمنقاب أو بدبوس.
  - قد تحدث صدمة كهربية أو ينشب حريق.
- استخدم أطقم خراطيم جديدة، حيث يجب عدم إعادة استخدام الخراطيم القديمة مرة أخرى.
- في حالة تلف السلك المستخدم حاليًا، يجب استبداله بمعرفة الشركة المصنِّعة أو مركز الصيانة أو أي شخص مسؤول وذلك لتجنب التعرض لأية مخاطر.
- قم بتوصيل السلك الأرضي باللوحة الأساسية ودفنه تحت الأرض على عمق ٢٥ سم تقريبًا. أو توصيل السلك الأرضي المتصل بطرف مناسب بمقبس طاقة أرضي. يحظر توصيل السلك بسلك هاتف أو أذرع مصابيح أو أنبوب غاز. option
- تم تصميم المنتج الذي قمت بشرائه للاستخدام المنزلي فقط.

يُعد استخدام المنتج لأغراض تجارية سوء استخدام له. وفي هذه الحالة، لا يتم تغطية المنتج من قبل الضمان الأساسي الذي تقدمه شركة Samsung، كما أن شركة Samsung لا تتحمل أية مسئولية عن الأعطال أو الخسائر التي تنجم عن سوء الاستخدام.

SW70W9XFP-02961E-01_AR.indd 4 12/18/2012 7:06:06 PM

المحتويات

إعداد الغسالة ٦

٦ وصف الأجزاء
٧ التحقق من السلامة قبل الغسيل والاعتناء بالملابس
٩ تعتمد طريقة الغسل بشكل تلقائي على نوعية الغسيل
١٠ لوحة التحكم

الوظائف اليدوية ١٥

١٥ الوظائف اليدوية

التركيب والصيانة ١٦

١٦ البيئة
١٦ وضع الغسالة على سطح مستوٍ
١٦ توصيل خرطوم التزوّد بالماء
١٨ تركيب لوحة الحماية من الفئران (اختياري)
١٨ كيفية توصيل خرطوم التصريف (اختياري)
٢١ إضافة المسحوق
٢١ إضافة منعّم الأقمشة
٢٢ مصفاة وصلة التزوّد بالماء
٢٢ تنظيف المصفاة
٢٣ تنظيف مصفاة المضخة (ميزة اختيارية)
٢٣ تنظيف حجيرة المسحوق

استكشاف المشاكل وحلها ٢٤

٢٤ استكشاف المشاكل وحلها

الغسالة لا تعمل؟ ٢٥

٢٥ الغسالة لا تعمل؟

المواصفات ٢٦

٢٦ المواصفات

SW70W9XFP-02961E-01_AR.indd 5 12/18/2012 7:06:06 PM

إعداد الغسالة

وصف الأجزاء

دليل المستخدم مخصص للاستخدام العام.
استعن بدليل المستخدم الخاص بطراز الغسالة.

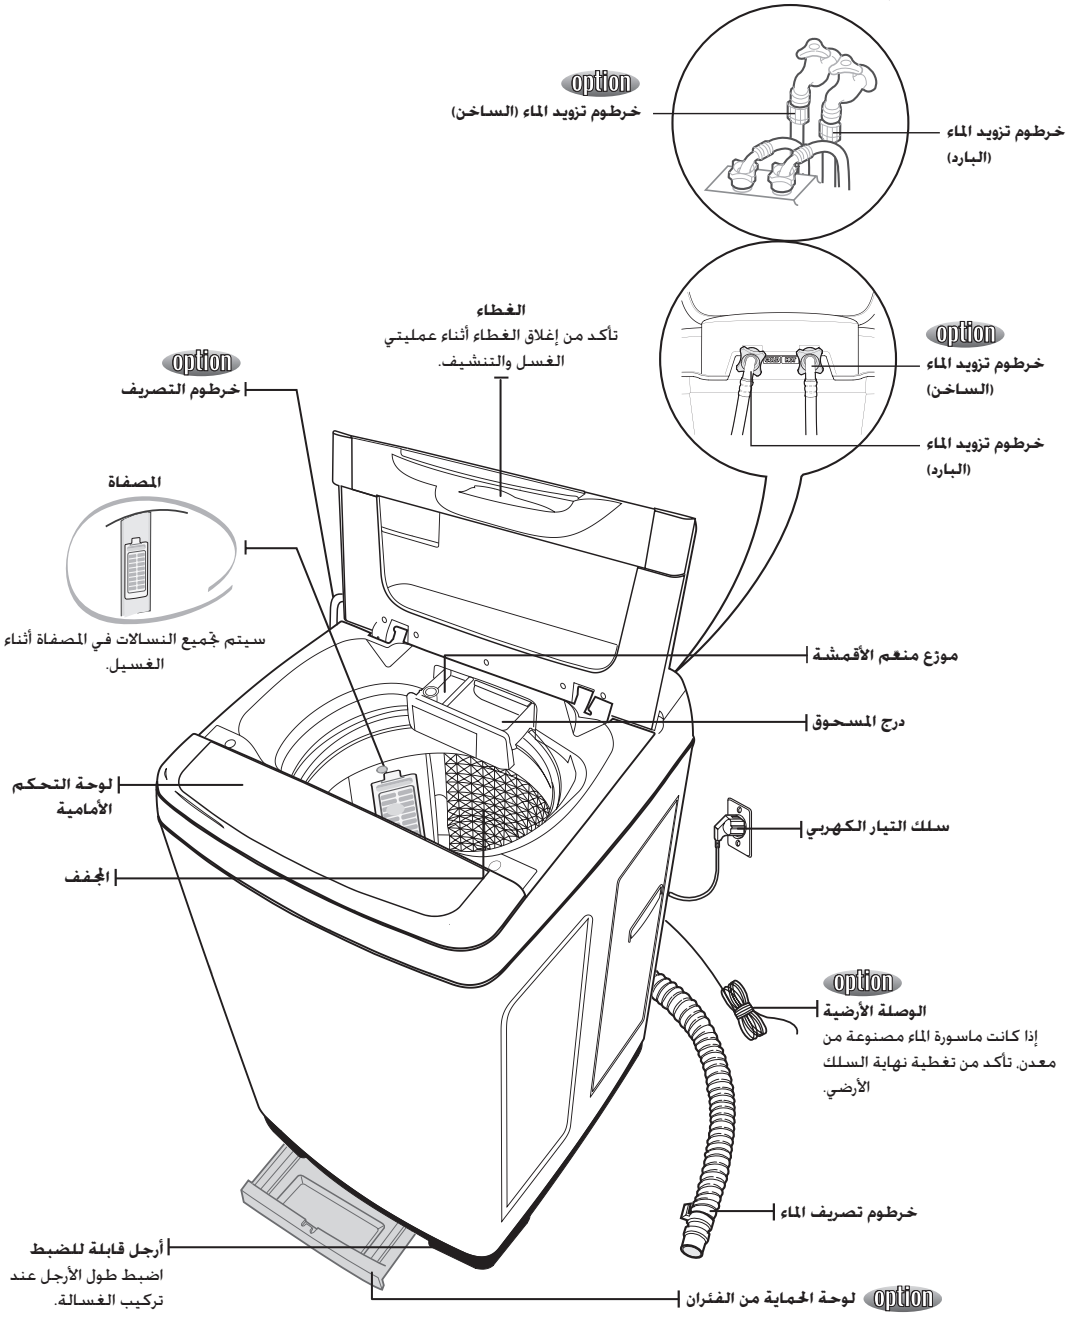

SW70W9XFP-02961E-01_AR.indd 6 12/18/2012 7:06:08 PM

التحقق من السلامة قبل الغسيل والاعتناء بالملابس

يجب إتباع تعليمات الفحص لتجنب المشاكل التي قد تواجهها أثناء استخدام الغسالة أو التلفيات التي قد تصيب الملابس.

- إذا حدثت المشاكل المذكورة أدناه بسبب أخطاء من قبل العميل، يتم تحصيل مصاريف خدمة منفصلة.

تعليمات الفحص المتبعة قبل بدء الغسيل

تأكد مما إذا كانت الملابس تبهت أم لا.

- أضف منظف سائل إلى منشفة بيضاء وقطعة الملابس في مكان لا يبدو على نحو جيد. ثم قم بدعكهما معًا بقوة. تحقق مما إذا كان اللون قد انتقل إلى المنشفة أم لا.
- تعامل بحذر مع الوشاحات والملابس المستوردة حيث أنها تفقد لونها بسهولة.
- تحقق مما إذا كان يوجد أية بقع أو أوساخ بالملابس.
- في حالة العثور على بقع، استخدم منشفة رطبة عليها مسحوق غسيل وادعكها في اتجاه واحد.
- قبل الغسيل، يجب القيام بمعالجة أولية للأكمام، والياقات، وثنيات الفساتين والجيوب بالتنظيف بفرشاة عليها مسحوق.

يتم التعامل مع الأقمشة المصنوعة من الصوف والمعالجة ضد التجعيد بشكل خاص، وذلك بتثبيتها بالخيوط قبل الغسل. تتم إزالة هذه الخيوط بعد جفاف الملابس.

الملابس غير القابلة للغسيل

الملابس التي تتأثر بسهولة حتى بالنقع في الماء.

- حتى بالنقع في الماء، يمكن أن يحدث تغيير في أربطة العنق وحمالات الصدر والسترات والبدل والمعاطف فقد تنكمش هذه الملابس أو يتغير لونها الخارجي وذلك لأن معظمها مصنوع من الحرير الصناعي والفسكوز والألياف ومشتقاتها من الألياف المختلطة.
- يمكن أن تتغير ألوان الأقمشة المعالجة أو المنقوشة أو الصناعية حتى بمجرد النقع في الماء.
- وتعتبر الأقمشة المصنوعة من القطن والصوف والحرير المعالج والمنتجات الجلدية والأدوات المصنوعة من الجلود والملابس المزينة بالجلد من المنتجات التي تفقد لونها بسهولة.
- لا تغسل تلك الملابس دون معرفة إرشادات الغسيل أو المنتج التي توضح كيفية التعامل معه.

نبذة عن مسحوق الغسيل

تنبيه

- عندما يكون مسحوق الغسيل غير قابل للذوبان بشكل جيد، استخدم الماء الدافئ (حوالي ٤٠ درجة مئوية) لإذابة المسحوق.
- استخدم كمية ملائمة من مسحوق الغسيل.
- حتى إذا تم الإفراط في استخدام مسحوق الغسيل، فلن تختلف النتيجة بعد الغسل. فقد يؤدي ذلك إلى تلف الملابس لعدم شطفها بدرجة كافية.
- قد تتسبب مواد التبييض في إتلاف الملابس حيث إنها مواد شديدة القلوية.
- اشطف الملابس بالشكل الكافي حيث أن بقاء المسحوق عليها يسبب روائح كريهة.
- إذا تم الإفراط في استخدام المسحوق أو الماء البارد، فلن يذوب المسحوق بالكامل وسيظل عالقًا بالملابس أو الخرطوم أو سلة التنشيف مما يسبب تلوثها.
- في حالة وجود غسيل متبقٍ، يجب وضع المسحوق في درج المسحوق. قد يؤدي توزيع مسحوق الغسيل على الغسيل بشكل مباشر إلى تلطخ الألوان.

SW70W9XFP-02961E-01_AR.indd 7 12/18/2012 7:06:08 PM

إعداد الغسالة

العناية بالملابس قبل الغسيل



أخرج المتعلقات الشخصية من الجيوب.

- تنبيه. افحص الجيوب! تتسبب بنس الشعر والعملات المعدنية في تلف الملابس والغسالة. حيث أنها تسبب ضوضاء ومشاكل للغسالة. لذا، يجب فحص الجيوب.

إذا تركت سَحَّابات السراويل مفتوحة أثناء الغسيل، فإن هذا قد يتسبب في تلف المجفف. يجب غلق السحَّابات وتثبيتها بخيط قبل الغسل.

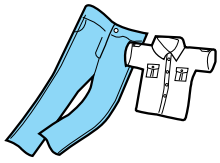

- قد تؤدي المعادن الموجودة على الملابس إلى تلف هذه الملابس وحوض الغسيل.
- اقلب الملابس التي بها أزرار أو الملابس المطرّزة قبل غسلها.
- قد تتشابك الملابس ذات الخيوط الطويلة مع ملابس أخرى وقد يؤدي ذلك إلى تلف هذه الملابس. احرص على تثبيت الخيوط قبل الغسيل.

غير مسموح بوضع الملابس المقاومة للماء (الباس التزحلق على الجليد وحفاضات الأطفال والدواسات) في الغسيل.

- قد يؤدي ذلك إلى إخراج الغسيل أو اهتزاز الغسالة بشكل غير طبيعي، مما قد يؤدي إلى إلحاق إصابات بالأشخاص أو تلف بالغسالة أو الأرضية أو الملابس. (الحفاضات والملابس المقاومة للماء ومعاطف المطر وأغطية المظلات وملابس التزحلق على الجليد وأغطية السيارات وحقائب النوم، إلخ).
- عند دوران الحوض، قد يبقى الماء داخل الملابس أو الأقمشة المقاومة للماء وقد يتجمع في أحد الأركان مما يؤدي إلى اهتزاز الغسالة بشكل غير طبيعي. وقد يرتفع الغسيل ويخرج من الغسالة مما يؤدي إلى إلحاق إصابات بالأشخاص.

انفض الأوساخ والأتربة عن الملابس.

- يؤدي دعك الأتربة وحبيبات الرمل المتراكمة على الملابس الرقيقة إلى تعريضها للتلف والحصول على نتائج غير مرضية بعد الغسل.

اغسل الجوارب البيضاء والأكمام والياقات مسبقًا قبل دورة الغسل الأساسية.

- لإزالة أي بقع أو أوساخ على الياقات والأكمام والثنيات والجيوب، ضع بعض من مسحوق الغسيل عليها وافركها برفق قبل الغسل.
- يمكن استخدام المنظفات السائلة أو المساحيق. لا تستخدم الصابون فقد يتسخ الحوض من الأوساخ الموجودة عليه.

اقلب ملابس الأطفال الرضع تلك على ظهرها قبل الغسيل.

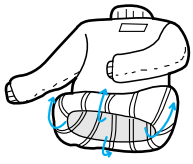

- إذا كانت الملابس بها أوساخ خارجية، يجب فصلها قبل الغسيل. حيث قد تعلق هذه الأوساخ (الأوساخ والخيوط) بالملابس الأخرى.
- اغسل الملابس السوداء والمناشف القطنية كلاً على حدة. إذا تم غسلها معاً، قد تعلق الأوساخ بالمناشف. افحص الملابس قبل الغسيل.

قد تسبب غسيل الملابس الكشميرية وذات الأحجام الكبيرة والأوزان الخفيفة (على سبيل المثال الملابس ذات التطريز البسيط، والملابس النسائية، والمنسوجات المصنوعة من النيلون والأقمشة الصناعية، إلى آخره) في إلحاق الضرر بالملابس نفسها كما قد تتسبب في مشاكل لغسالة الملابس. استخدم شبكة الغسيل أو اغسلها على حدة.

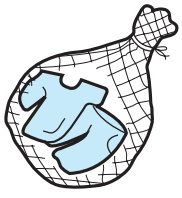

- يجب وضع الملابس المزينة بالخيوط، والدانتيل، وملاءات الأسّرة، والملابس الصوفية في شبكة غسيل قبل وضعها في الغسالة.
- ضع الملابس الخفيفة في شبكة الغسيل.
- لا تستخدم سوى شبكات الغسيل التجارية في عملية الغسيل.

يجب ضغط الستائر والملابس الخفيفة والجينز بدفعها في الماء حتى لا تطفو فوق سطح الماء.

- في حالة طفو هذه الملابس فوق سطح الماء، اضغط على الزر Start/Pause (تشغيل/توقف) لإيقاف التشغيل ثم اضغط على تلك الملابس حتى يغمرها الماء. إذا استمرت عملية الغسيل والملابس طافية فوق سطح الماء، قد يتسبب ذلك في إلحاق الضرر بالملابس والغسالة علاوة على الحصول على نتائج غير مرضية بعد الغسيل.

SW70W9XFP-02961E-01_AR.indd 8 12/18/2012 7:06:10 PM

تعتمد طريقة الغسل بشكل تلقائي على نوعية الغسيل

قبل بدء عملية الغسل، تحقق مما يلي:

- قم بتوصيل خرطوم تزويد الماء بصنبور الماء. اترك الصنبور مفتوحًا. قم بتوصيل سلك التيار الكهربي وتأكد أن خرطوم التصريف متجه لأسفل.

الغسل للمرة الأولى

قبل غسل الملابس للمرة الأولى، يجب تشغيل الجهاز دورة كاملة دون ملابس.

للقيام بذلك:

١. اضغط على زر **Power (الطاقة)**.

٢. افتح درج المسحوق وضع قليلاً منه.

٣. قم بتشغيل تزويد الماء المتصل بالغسالة.

٤. اضغط على الزر **Start/Pause (تشغيل/توقف)**.

يزيل ذلك أي ماء متبق في الغسالة نتيجة للتشغيل الاختباري الذي قامت به الشركة المصنِّعة للجهاز.

ملاحظات خاصة!

وظيفة التحسس التلقائي

- طبقًا للبرامج المحددة، يتم استشعار حجم الغسيل تلقائيًا ومن ثم يتم تحديد مستوى الماء المناسب ووقت الغسيل كما يتم تحديد دورة الشطف ووقت التنشيف تلقائيًا للغسل التلقائي.
- عقب التشغيل، يتم تحديد البرنامج ويتم ضغط الزر **Start/Pause (تشغيل/توقف)**، ثم تبدأ لوحة الغسيل في الدوران بدون ماء. يتم التعرُّف بهذا الإجراء على حجم الغسيل الموجود في حوض الغسيل، أي إنه ليس خللاً في أداء الجهاز. بعد عملية التحسس هذه، يتم تزويد الماء تلقائيًا.

إضافة مسحوق الغسيل ومنعم الأقمشة

- يتعرف هذا الإجراء على كم الغسيل ويشير إلى مستوى الماء وكمية المسحوق، ثم يبدأ تزويد الماء في الحال.
- أثناء عملية تزويد الماء، يمكن فتح درج المسحوق لإضافة المسحوق. على الرغم من ذلك، يفضل ضغط الزر **Start/Pause (تشغيل/توقف)** لإيقاف تزويد الماء وإضافة المسحوق. أغلق الغطاء واضغط الزر **Start/Pause (تشغيل/توقف)** مرة أخرى. تُعد هذه الطريقة مناسبة أكثر.
- إذا تم وضع منعّم الأقمشة في موزع المنعّم، يتم إضافته تلقائيًا في دورة الشطف الأخيرة.

ضع الغسيل في الغسالة وأضف أيضًا المسحوق.

- يجب الانتباه إلى عدم تجاوز وزن الملابس المحدد في الغسالة. استخدم المسحوق الملائم للمنسوجات التي تغسلها.

- إذا كان الباب مفتوحًا أثناء التشغيل، تتوقف الغسالة عن العمل تلقائيًا للأمان. (باستثناء تزويد الماء الذي يمكن أن يستمر والغطاء مفتوحًا.)
- عند اختيار الماء الساخن، يتم تزويد كل من الماء البارد والساخن في العشرين ثانية الأولى من أجل حماية الملابس.
- يمكن التحكم في وقت الغسيل ودورة الشطف ووقت الدوران في كل دورة أثناء الغسيل.

SW70W9XFP-02961E-01_AR.indd 9 12/18/2012 7:06:10 PM

إعداد الغسالة

لوحة التحكم

للحصول على مزيد من التفاصيل، راجع لوحة التحكم الخاصة بالغسالة.

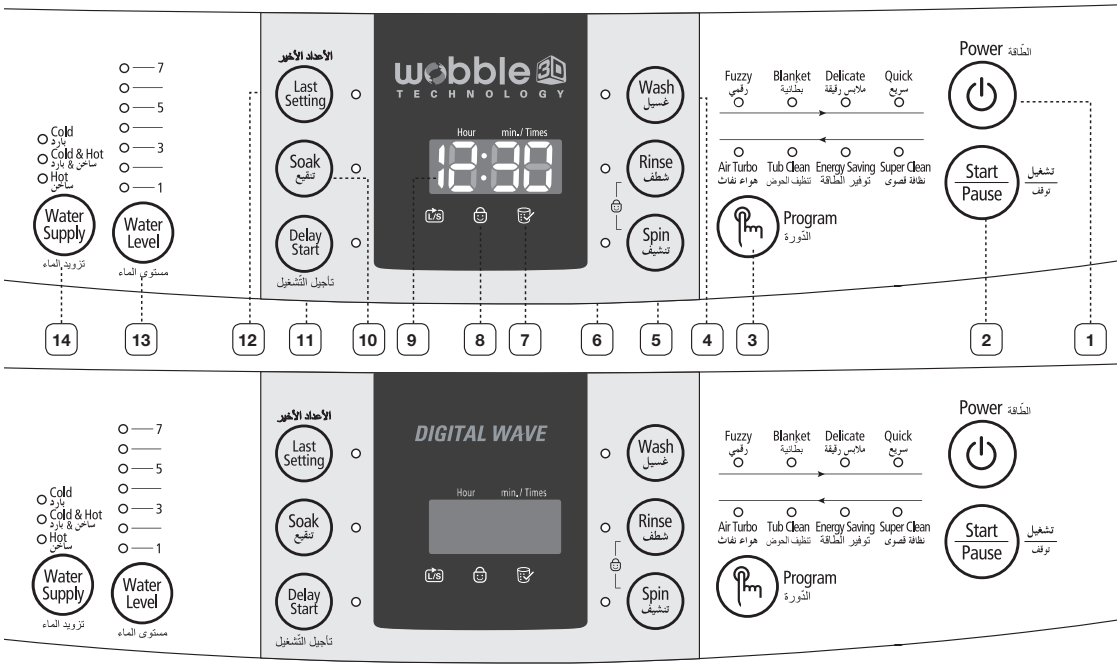

١ **الزر POWER (الطاقة)**	اضغط هذا الزر مرة واحدة للتشغيل. اضغط هذا الزر مرة أخرى لإيقاف التشغيل.
٢ **الزر START/PAUSE (تشغيل/توقف)**	استخدم هذا الزر للإيقاف المؤقت لعملية التشغيل وإعادة التشغيل. لتغيير أحد إجراءات الغسيل أثناء عملية التشغيل. اضغط على هذا الزر للإيقاف، ومرة أخرى لإعادة التشغيل بعد تغيير الإجراء.
٣ **زر تحديد Program (الدورة)**	تتغير دورة الغسيل في كل مرة تضغط فيها على هذا الزر: Fuzzy (رقمي) ← Blanket (بطانية) ← Delicate (ملابس رقيقة) ← Quick (سريع) ← Super Clean (نظافة قصوى) ← Energy Saving (توفير الطاقة) ← Tub Clean (تنظيف الحوض)← Air Turbo (هواء نفاث)
٤ **الزر WASH (غسيل)**	اضغط على هذا الزر للقيام بالغسل فقط أو لضبط مدة الغسل. يمكنك ضبط مدة الغسل بين ٤ إلى ٣٠ دقيقة.
٥ **الزر SPIN (تنشيف)**	اضغط على هذا الزر لإجراء عملية التنشيف أو لضبط مدة التنشيف. يمكنك ضبط مدة التنشيف بين ٠ إلى ٩ دقائق. عند تحديد التنشيف فقط، ستختلف مدة التنشيف عن الوقت الكلي المتبقي. ويرجع ذلك إلى أن الوقت الكلي المتبقي يتضمن وقت التنشيف الفعلي ووقت تصريف الماء والإيقاف.
٦ **الزر RINSE (شطف)**	اضغط على هذا الزر للقيام بالشطف فقط أو لضبط عدد مرات الشطف. يمكنك ضبط عدد مرات الشطف حتى خمس مرات.
٧ **وظيفة فحص الحوض** Tub Check	في حالة إضاءة مؤشر "فحص الحوض" على شاشة العرض (يومض لمدة ٣ دقائق)، عندئذ قم بتشغيل دورة Tub Clean (تنظيف الحوض). تعمل وظيفة Tub Clean (تنظيف الحوض) على إزالة الأوساخ من الحوض للحفاظ على الملابس نظيفة.

SW70W9XFP-02961E-01_AR.indd 10 12/18/2012 7:06:13 PM

٨ وظيفة التأمين ضد عبث الأطفال	يساعد هذا الجهاز على حماية الأطفال من التعرض للأذى دون قصد أثناء اللعب بالغسالة. • كيفية تشغيل وظيفة "التأمين ضد عبث الأطفال": اضغط على زر "Power (الطاقة)" للانتقال إلى وضع الغسل الأولي. - بالضغط على الزر "**Start/Pause (تشغيل/توقف)**". تبدأ عملية الغسيل وفي حالة الاحتياج إلى وظيفة "التأمين ضد عبث الأطفال" أثناء الغسل - اضغط على كل من الزرين "Rinse (شطف)" و"Spin (تنشيف)" في الوقت نفسه. (لمدة ٣ ثوانٍ) (ملاحظة: لا يمكنك تشغيل الوظيفة دون الضغط على زر "Power (الطاقة)".) • **لإلغاء** تأمين وظيفة "التأمين ضد عبث الأطفال": في حالة برمجة وظيفة "التأمين ضد عبث الأطفال". اضغط على كل من الزرين "Rinse (شطف)" و"Spin (تنشيف)" في الوقت نفسه.
٩ الوقت المتبقي، وقت تأجيل التشغيل، شاشة الأخطاء	عرض الوقت المتبقي للغسل. عرض وقت تأجيل التشغيل المحفوظ. عرض حالة الخطأ إذا حدثت مشكلة في الغسالة لتتمكن من اتخاذ الإجراء اللازم.
١٠ الزر SOAK (تنقيع)	اضغط على هذا الزر لتشغيل وظيفة التنقيع. يمكنك ضبط وقت التنقيع بين ١٠ إلى ٦٠ دقيقة.
١١ الزر DELAY START (تأجيل التشغيل)	اضغط على هذا الزر لإنهاء الغسيل في وقت محدد. قم بإيقاف تشغيل الغسالة لإلغاء تأجيل التشغيل المحفوظ. يمكنك ضبط وقت تأجيل التشغيل بين ٣ إلى ١٩ ساعة.
١٢ LAST SETTING (الإعداد الأخير)	اضغط على هذا الزر لتحميل الإعدادات الخاصة بالدورة الأخيرة. قم بتشغيل دورة الغسيل باستخدام الإعدادات الأخيرة التي تم استخدامها دون الحاجة إلى إدخالها يدويًا مرة أخرى. يتم حفظ اختياراتك تلقائيًا عند الضغط على الزر Start/Pause (تشغيل/توقف). لاستخدام الدورة المحفوظة في الذاكرة. اضغط على الزر Last Setting (الإعداد الأخير) ثم اضغط على الزر Start/Pause (تشغيل/توقف). - سيتم عرض الوظائف المحفوظة في الذاكرة على اللوحة. تنبيه: لا يتم حفظ الإعدادين Delay start (تأجيل التشغيل) وWater level (مستوى الماء) تلقائيًا وسيتم إعادة ضبطهما بعد عملية الغسل.
١٣ الزر WATER LEVEL (مستوى الماء)	يتم ضبط مستوى الماء تلقائيًا. ومع ذلك، يمكنك تحديد مستوى الماء يدويًا بالضغط على هذا الزر.
١٤ الزر WATER SUPPLY (تزويد الماء)	في كل مرة تضغط فيها على الزر، يتم التنقل خلال نوع المياه. Cold (بارد) ← Cold + Hot (ساخن + بارد) ← Hot (ساخن) ← Cold (بارد)

SW70W9XFP-02961E-01_AR.indd 11 12/18/2012 7:06:14 PM

إعداد الغسالة

الدروة FUZZY (رقمي)

تحديد دورة الغسيل المثلى تلقائياً.

١. اضغط على زر **Power (الطاقة)** حتى يتم "**التشغيل**".

٢. اضغط على الزر **Start/Pause (تشغيل/توقف)**.
يتم تحديد "مستوى الماء" تلقائياً. ثم تتم متابعة عمليات الغسيل والشطف والتنشيف.
إذا كنت ترغب في التوقف المؤقت، اضغط على الزر **Start/Pause (تشغيل/توقف)** مرة أخرى. يمكنك تغيير الدورة أثناء التوقف المؤقت.

٣. أغلق الغطاء.

الدورة BLANKET (بطانية)

(الغسيل ذو الحجم الكبير مثل البطاطين وملاءات الأسّرة)

١. اضغط على زر **Power (الطاقة)** حتى يتم "**التشغيل**".

٢. اضغط على زر تحديد **Program (الدورة)** مرة واحدة.

٣. اضغط على الزر **Start/Pause (تشغيل/توقف)**.
ثم تتم متابعة عمليات الغسيل والشطف والتجفيف. إذا كنت ترغب في التوقف المؤقت، اضغط على الزر **Start/Pause (تشغيل/توقف)** مرة أخرى. يمكنك تغيير الدورة أثناء التوقف المؤقت.

٤. أغلق الغطاء.

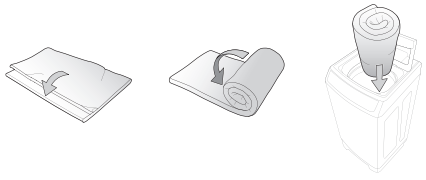

- قم بطي الغسيل ذي الحجم الكبير (البطاطين وملاءات السرير) بالطريقة التالية قبل وضعه بداخل سلة التنشيف.
- لا تغسل البطانية الكهربائية والسجاد.
- ضع الغسيل الخفيف وكبير الحجم في شبكة الغسيل (على سبيل المثال، الملابس الصوفية) حيث أن حجمها يزيد في الماء مما قد يتسبب في الضرر.

عند غسل أنواع غسيل ثقيلة (مثل البطاطين والملابس الشتوية وغيرها)، أضف المنظف قبل إضافة الملابس للاستفادة من تقنية الغسل في الاتجاهات الأربعة لأعلى ولأسفل ولليسار واليمين من خلال تقنية الرجرجة ™Wobble Technology للحصول على نتيجة أفضل.

الدورة DELICATE (ملابس رقيقة)

يُستخدم هذا البرنامج للسترات القابلة للغسيل والسترات الصوفية والملابس الخفيفة، إلخ.

١. اضغط على زر **Power (الطاقة)** حتى يتم "**التشغيل**".

٢. اضغط على زر تحديد **Program (الدورة)** مرتين

٣. اضغط على الزر **Start/Pause (تشغيل/توقف)**.
ثم تبدأ عمليات الغسيل والشطف والتنشيف. إذا كنت ترغب في التوقف المؤقت، اضغط على الزر **Start/Pause (تشغيل/توقف)** مرة أخرى. يمكنك تغيير الدورة أثناء التوقف المؤقت.

٤. أغلق الغطاء.

تنبيه
- يمكنك تحديد ماء بارد فقط.
- تعمل دورة التنشيف الأخيرة بشكل خفيف لمنع تجعيد الأقمشة.
- استخدم مسحوق الغسيل الموضح في الغسيل.

الدورة QUICK (سريع)

تستخدم هذه الدورة عندما تريد غسل المناشف التي تستخدم بشكل متكرر أو الغسيل قليل الاتساخ.
بما أن الغسيل يكون سريعاً، يُفضل استخدام هذه الدورة للغسيل المتسخ اتساخاً خفيفاً أو أقل.

١. اضغط على زر **Power (الطاقة)** حتى يتم "**التشغيل**".

٢. اضغط على زر تحديد **Program (الدورة)** ثلاث مرات.

٣. اضغط الزر **Start/Pasue (تشغيل/توقف)**
يتم تحديد مستوى الماء تلقائياً. ثم تبدأ عمليات الغسيل والشطف والتنشيف. إذا كنت ترغب في التوقف المؤقت، اضغط على الزر **Start/Pasue (تشغيل/توقف)** مرة أخرى. يمكنك تغيير الدورة أثناء التوقف المؤقت.

٤. أغلق الغطاء.

SW70W9XFP-02961E-01_AR.indd 12 12/18/2012 7:06:14 PM

الدورة SUPER CLEAN (نظافة قصوى)

يُستخدم للحصول على غسل أكثر نظافة.

١. اضغط على زر **Power (الطاقة)** حتى يتم "**التشغيل**".
٢. اضغط على زر تحديد **Program (الدورة)** أربع مرات.
٣. اضغط على الزر **Start/Pause (تشغيل/توقف)** وضع الكمية المناسبة من المسحوق في الحوض.
يتم تحديد مستوى الماء تلقائيًا.
٤. أغلق الغطاء.

برنامج توفير الطاقة

استخدم هذه الدورة لتوفير الطاقة.

١. اضغط على زر **Power (الطاقة)** حتى يتم «**التشغيل**».
٢. اضغط على زر تحديد **Program (الدورة)** خمس مرات.
٣. اضغط على الزر **Start/Pause (تشغيل/توقف)** وضع الكمية المناسبة من المسحوق في الحوض.
٤. أغلق الغطاء.

دورة تنظيف الحوض

استخدم هذه الدورة لتنظيف الحوض. فهي تؤدي إلى إبقاء الحوض نظيفًا ومعقمًا.

١. اضغط على زر **Power (الطاقة)** "لتشغيل" غسالة الملابس.
٢. اضغط على زر تحديد **Program (الدورة)** ست مرات.
٣. اضغط على الزر **Start/Pause (تشغيل/توقف)**.
٤. أضف المسحوق ثم أغلق الباب

- لا تقم أبدًا بوضع الغسيل في الحوض عند القيام بتنظيفه، فقد يؤدي ذلك إلى تلطخ ألوان الغسيل أو تلفه.
- عند القيام بالغسل بعد تنظيف الحوض، قد تجد بعض الرواسب. التي ترجع إلى بقايا المادة المنظفة الناتجة عن عملية التنظيف. قم بإجراء دورة الشطف من مرتين إلى ثلاث مرات.
- سيتم ضبط مستوى الماء إلى (متوسط) في بداية الأمر ثم يتغير إلى (عالي) أثناء عملية الشطف.

دورة الهواء النفاث

تعمل هذه الدورة على توفير الوقت، مما يضمن لك تجفيف ملابسك بشكل أسرع من التجفيف على حبل الغسيل.

١. اضغط على زر **Power (الطاقة)** حتى يتم "**التشغيل**".
٢. اضغط على زر تحديد **Program (الدورة)** سبع مرات.
٣. أغلق الغطاء.
٤. اضغط على الزر **Start/Pause (تشغيل/توقف)**.

- حدد هذا إذا أردت تجفيف الغسيل في مرحلته المتوسطة.

الاحتفاظ بالحوض نظيفًا

عند استخدام الغسالة في الأجواء الرطبة لفترة طويلة، قد تلتصق البكتريا العالقة في الهواء بأنواعها المختلفة بالحوض وتكون أجزاء متسخة سوداء (فطريات) مما قد يلحق الضرر بالإنسان.
للاحتفاظ بالحوض في حالة نظيفة وصحية دائمًا، يُنصح باستخدام المواد المنظّفة لتنظيف الحوض بانتظام كل شهر أو ثلاث شهور.

تنبيه
- تعمل دورة Tub Clean (تنظيف الحوض) الاقتصادية حتى عند عدم استخدام منظف.
- عند استخدام هذه الوظيفة، لا تضع ملابس داخل الحوض. قد يؤدي ذلك إلى تلف الملابس أو حدوث خلل في أداء المنتج.
- تأكد من استخدام المنظف المخصص فقط لتنظيف الحوض عند الحاجة لاستخدام منظف لهذه الدورة.

SW70W9XFP-02961E-01_AR.indd 13 12/18/2012 7:06:15 PM

إعداد الغسالة

تأجيل التشغيل

كيف تتم عملية تأجيل الغسل؟

حدد هذه الدورة عندما تكون مضطراً للخروج أو القيام بأي شيء آخر.

١. اضغط على زر **Power (الطاقة)** حتى يتم "التشغيل".

٢. اضغط على الزر **Delay Start (تأجيل التشغيل)** مرة واحدة.

يمكنك تغيير وقت تأجيل التشغيل مع الضغط على الزر **Delay Start (تأجيل التشغيل)**. (من ٣ إلى ١٩ ساعة)

٣. اضغط على الزر **Start/Pause (تشغيل/توقف)** وضع الكمية المناسبة من المسحوق في الحوض.

٤. أغلق الباب.

تنتهي عملية الغسيل في الوقت الذي حددته. أضف المسحوق ومنعّم الأقمشة بالتناسب مع مستوى الماء. ثم أغلق الباب.

- يجب إضافة المسحوق في درج المسحوق.
- في حالة وضع المسحوق مباشرة على الغسيل، تفقد بعض الملابس لونها في حال تأخير التشغيل.
- إذا تطلب الأمر إلغاء Delay Start (تأجيل التشغيل)، اضغط على زر Power (الطاقة).
- يتغير وقت إنهاء التشغيل الذي حددته بناء على ضغط الماء.

التأمين ضد عبث الأطفال

هذه الوظيفة مخصصة لحماية الأطفال وكبار السن وقليلي الخبرة.

١. اضغط على زر Power (الطاقة).

٢. لتنشيط وظيفة "التأمين ضد عبث الأطفال" اضغط مع الاستمرار على الزرين Rinse (شطف) وSpin (تنشيف) معًا لمدة ٣ ثوانٍ. (في حالة تنشيط وظيفة "التأمين ضد عبث الأطفال"، يومض الرمز "التأمين ضد عبث الأطفال".)

٣. التشغيل بعد تنشيط وظيفة "التأمين ضد عبث الأطفال".

- حتى إذا تم تنشيط وظيفة "التأمين ضد عبث الأطفال"، تعمل كافة الأزرار حتى يتم فتح الباب.
- عند فتح الباب أثناء تنشيط "التأمين ضد عبث الأطفال" تصدر أصوات تنبيه ورسالة خطأ. وفي خلال ٣٠ ثانية يبدأ تصريف الماء تلقائيًا. ولكن إذا قمت بإغلاق الباب خلال ٣٠ ثانية، فلن يتم تصريف الماء. (رسالة الخطأ المعروضة "CL" و"dE").
- لإضافة غسيل بعد تنشيط وظيفة "التأمين ضد عبث الأطفال"، يجب تعطيل وظيفة "التأمين ضد عبث الأطفال".

٤. لتعطيل وظيفة "التأمين ضد عبث الأطفال" اضغط مع الاستمرار على الزرين Rinse (شطف) وSpin (تنشيف) معًا لمدة ٣ ثوانٍ. (في حالة تعطيل وظيفة "التأمين ضد عبث الأطفال"، يتم إيقاف تشغيل الرمز "التأمين ضد عبث الأطفال".)

٥. لمسح شاشة "CL" بعد اكتمال التصريف، أغلق باب الغسالة وقم بإيقاف تشغيل الغسالة ثم أعد تشغيلها.

تنبيه

- تعمل هذه الوظيفة على منع الإصابات والأعطال للمنتج بسبب عمليات تشغيل غير مناسبة أو العبث من قبل الأطفال أو كبار السن أو قليلي الخبرة.
- في حالة فتح الباب عند تنشيط وظيفة "التأمين ضد عبث الأطفال"، يتم تصريف المياه لمنع غرق الأطفال.
- لإضافة غسيل بعد تنشيط وظيفة "التأمين ضد عبث الأطفال"، يجب تعطيل وظيفة "التأمين ضد عبث الأطفال".
- حتى في حالة إيقاف تشغيل الطاقة ثم إعادة تشغيلها عند تشغيل وظيفة "التأمين ضد عبث الأطفال"، تظل وظيفة "التأمين ضد عبث الأطفال" نشطة.
- فبمجرد تنشيط "التأمين ضد عبث الأطفال" حتى في حالة إيقاف تشغيل الطاقة، سيتم تصريف الماء تلقائيًا خلال ٣٠ ثانية إذا كان الباب مفتوحًا.
- لا يمكن تعطيل وظيفة "التأمين ضد عبث الأطفال" إذا ظهرت رسالة الخطأ CL. (إلا إنه يمكن تعطيل وظيفة "التأمين ضد عبث الأطفال" إذا ظهرت رسالة الخطأ dE.)

SW70W9XFP-02961E-01_AR.indd 14 12/18/2012 7:06:15 PM

الوظائف اليدوية

يمكن تحديد الوظيفة لكل برنامج.

(مثال) للغسيل البسيط كما في دورة الأوساخ القليلة :

Power (الطاقة) ← تحديد برنامج الأوساخ القليلة ← Wash (غسيل) ← Start/Pause (تشغيل/توقف)

الغسيل فقط 	اضغط على زر **Power (الطاقة)**. اضغط على الزر **Wash (غسيل)**. اضغط على الزر **Start/Pause (تشغيل/توقف)**. تتم عملية الغسيل لمرة واحدة. عند الضغط على الزر **Wash (غسيل)** أثناء الغسيل، يمكن تغيير مدة الغسيل لمدة تتراوح بين ٤ إلى ٣٠ دقيقة.
الشطف فقط 	اضغط على الزر **Rinse (شطف)**. اضغط على الزر **Start/Pause (تشغيل/توقف)**. تتم عملية الشطف مرة واحدة. عند الضغط على الزر **Rinse (شطف)**، يمكن تغيير عدد مرات الشطف لتتراوح من ١ إلى ٥ مرات.
التنشيف فقط 	اضغط على الزر **Spin (تنشيف)**. اضغط على الزر **Start/Pause (تشغيل/توقف)**. تستمر عملية الدوران لمدة ٤ دقائق. عند الضغط على الزر **Spin (تنشيف)**، يمكن تغيير مدة الدورة من ٠ إلى ٩ دقائق. في حالة تحديد ٠ دقيقة، يتم إنهاء الدورة بعد دورة التصريف فقط بدون تشغيل دورة التنشيف.
الغسيل والشطف 	اضغط على كل من الزرين **Wash (غسيل)** و**Rinse (شطف)**. اضغط على الزر **Start/Pause (تشغيل/توقف)** مرة واحدة. يقوم ذلك بالتحقق من كمية الغسيل، ويحدد زمن فترة الغسل والشطف تلقائيًا. عند الضغط على الزرين **Wash (غسيل)** و**Rinse (شطف)**، يتم تحديد وقت الغسيل إلى ما بين ٤ و ٣٠ دقيقة، وتحديد وقت الشطف إلى ما بين مرة واحدة وخمس مرات.
الشطف والتنشيف 	اضغط على الزر **Rinse (شطف)** و**Spin (تنشيف)**. اضغط على الزر **Start/Pause (تشغيل/توقف)** مرة واحدة. ثم تبدأ عمليتا الشطف والتنشيف. عند الضغط على الزرين **Rinse (شطف)** و**Spin (تنشيف)**، يتم تحديد عدد دورات الشطف ما بين ١ و٥ مرات، ويتم تحديد دورة التنشيف الخاصة بعملية التجفيف ما بين ٠ و٩ دقائق.
الغسيل والشطف والتنشيف 	اضغط على الزر **Wash (غسيل)** و**Rinse (شطف)** و**Spin (تنشيف)**. اضغط على الزر **Start/Pause (تشغيل/توقف)** مرة واحدة. يتم تشغيل وظيفة **Wash (غسيل)** و**Rinse (شطف)** و**Spin (تنشيف)**.

SW70W9XFP-02961E-01_AR.indd 15 12/18/2012 7:06:19 PM

التركيب والصيانة

دليل المستخدم مخصص للاستخدام العام.
استعن بدليل المستخدم الخاص بطراز الغسالة.

البيئة

اترك مساحة
اترك مسافة تقدر بـ ١٠ سم بين الغسالة والحائط.
ضع الغسالة على أرض ثابتة ومستوية.
إذا تم وضع الغسالة على سطح غير مستو أو ضعيف سيؤدي هذا إلى ارتفاع صوت الغسالة أو اهتزازها أثناء التشغيل. (المسافة المسموح بها ١ ياردة)
قم بتعديل الأرجل للوصول إلى وضع متوازن.
لا تقم أبداً بتثبيت الغسالة بالقرب من الماء.
لا تضع الغسالة في غرف ينبعث منها الأبخرة أو حيث تكون معرضة بشكل مباشر إلى المطر. قد تتسبب الرطوبة في تلف المادة العازلة التي تحيط بالأسلاك الكهربائية مما ينتج عنه صدمات كهربائية.
تجنب الضوء المباشر لأشعة الشمس أو السخانات.
تتأثر مكونات الأسلاك الكهربائية المصنوعة من البلاستيك بالحرارة المباشرة. لا تقم أبداً بوضع الغسالة بالقرب من الأفران، أو غلايات الماء، إلى آخره. ولا تضعها تحت أشعة الشمس المباشرة.

وضع الغسالة على سطح مستوٍ

- إذا لم تكن الغسالة مستوية على الأرض، فستهتز بشكل كبير أو قد تتوقف عن التشغيل. لذا يُرجى التأكد من أن الغسالة مستوية بشكل صحيح.

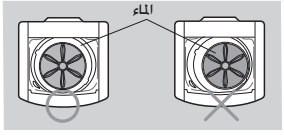

تأكد من وضع الغسالة بشكل مستو من خلال فحص وضع حوض الغسيل.

- افتح باب الغسالة، ثم اسكب الماء داخل حاوية الغسيل حتى المستوى الذي يقع أدنى المضخة، وقم بتعديل الأرجل بحيث تكون المضخة في وسط الماء كما هو مبين في الشكل.
- ابعد الغسالة أكثر من ١٠ سم عن الحائط.
- اضبط استواء الأرجل.

توصيل خرطوم التزوّد بالماء

١. قم بفك المحوّل من خرطوم توريد الماء.



٢. أولاً، استخدام مفك من نوع "+" لفك المسامير القلاووظ الأربعة الموجودة بالمحوّل. ثم أخرج المحوّل وقم بلف الجزء (ب) باتجاه السهم لإحداث فجوة تقدر بنحو ٥ مم بينهما.

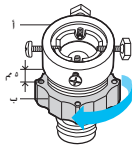

٣. صل المحوّل بصنبور الماء عن طريق ربط المسامير بإحكام. ثم لف الجزء (ب) باتجاه السهم وضع الجزأين (أ) و(ب) معاً.

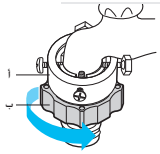

SW70W9XFP-02961E-01_AR.indd 16 12/18/2012 7:06:21 PM

٤. وصّل خرطوم التزوّد بالماء بالمحوّل. اسحب الجزء (ج) من خرطوم توريد الماء لأسفل. عند إرخاء الجزء (ج)، يتصل الخرطوم بالمحوّل تلقائياً محدثاً صوت "نقرة".

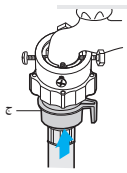

٥. صل الطرف الآخر من خرطوم التزوّد بالماء بصمام دخول الماء الموجود في خلفية الغسالة. لف الخرطوم في اتجاه عقارب الساعة إلى النهاية.

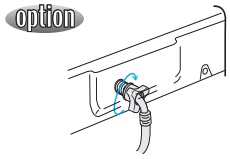

١-٥. صل الطرف الآخر من خرطوم توريد الماء بصمام دخول الماء الموجود في أعلى الغسالة. لف الخرطوم في اتجاه عقارب الساعة إلى النهاية.

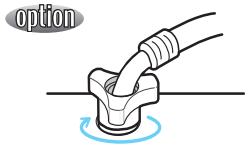

- إذا كان صنبور الماء من نوع برغي، ركب خرطوم توريد للماء يلائم الصنبور كما هو موضح. بعد اكتمال التوصيل، إذا تسرب الماء من الخرطوم، كرر نفس الخطوات.

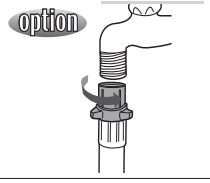

بعد اكتمال التوصيل، إذا تسرب الماء من الخرطوم، كرر نفس الخطوات.
استخدم صنبور من النوع العادي لتوريد الماء.
إذا كان الصنبور مربعًا أو كبيرًا جداً، أزل حلقة الإبعاد قبل إدخال الصنبور إلى المحوّل.

SW70W9XFP-02961E-01_AR.indd 17 12/18/2012 7:06:23 PM

التركيب والصيانة

تركيب لوحة الحماية من الفئران (اختياري)

قم بإمالة الغسالة قليلاً وارفع اللوحة حتى يتم إغلاقها. وفي النهاية قم بتثبيت اللوحة بمسمار قلاووظ في القاعدة كما هو موضح بالشكل.

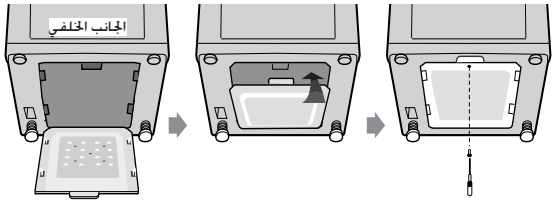

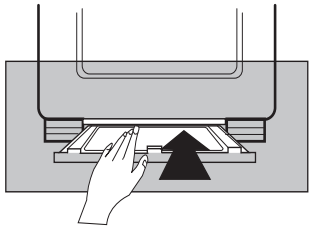

١. أدخل لوحة الحماية من الفئران في فتحة التجميع الموجودة بالجانب الخلفي إلى النهاية.

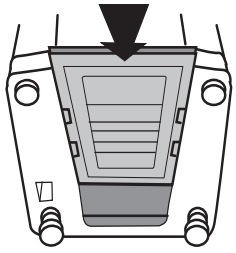

٢. إذا واجهتك صعوبات في إدخال اللوحة ارفع الغسالة قليلاً وقم بإدخالها.

كيفية توصيل خرطوم التصريف (اختياري)

في حالة استخدام غسالة ذات مضخة تصريف

انزع غطاء الخرطوم وصل خرطوم الصرف.

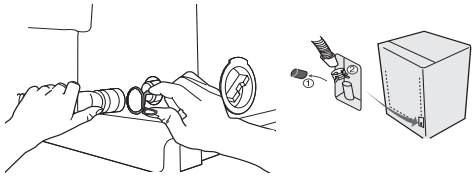

تأكد من توصيل خرطوم تصريف الماء بإحكام في مخرج التصريف الموجود على اللوحة الخلفية للغسالة.

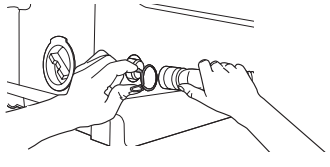

تأكد من توصيل خرطوم تصريف الماء بإحكام في مخرج التصريف الموجود في جانب الغسالة.

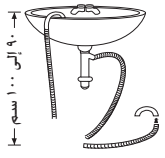

ثبت خرطوم تصريف الماء على بعد يقدر بنحو ٩٠ إلى ١٠٠سم فوق الأرض.

SW70W9XFP-02961E-01_AR.indd 18 12/18/2012 7:06:38 PM

في حالة الغسالة العامة

١. بعد الضغط على حلقة الوصل، أدخل خرطوم تصريف الماء.

٢. بعد توجيه خرطوم تصريف الماء إلى المصرف، صله بمخرج التصريف الخاص بالغسالة.

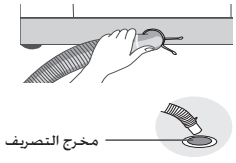

٣. تأكد من اتصاله بإحكام بالضغط على حلقة الوصل ودفعها في مخرج التصريف.

- يمكن تعديل طول خرطوم التصريف بحيث يمكنك إطالته ليصل إلى الطول الملائم.



كيفية تغيير اتجاه خرطوم تصريف الماء

- يتم الضغط على مقبض حلقة الوصل لدفع خرطوم تصريف الماء. قم بتغيير اتجاه خرطوم التصريف واتبع الإرشادات المذكورة أعلاه مرة أخرى.

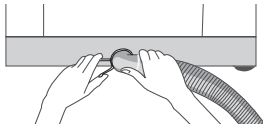

تنبيهات حول إدخال خرطوم تصريف الماء

١. في حالة استخدام خرطوم تصريف الماء ووصله بخراطيم أخرى يجب ألا يزيد طوله عن ٣ متر.

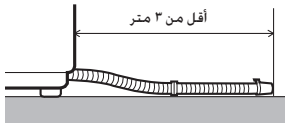

٢. كن حذراً في تصريف الماء حتى نهاية خرطوم التصريف.

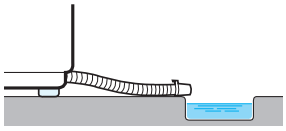

٣. يجب ألا تزيد عتبة الباب عن ٥ سم.

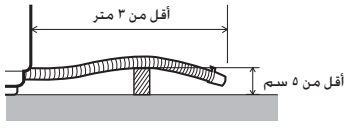

٤. لا تقم بتثبيت خرطوم تصريف الماء أسفل الغسالة.

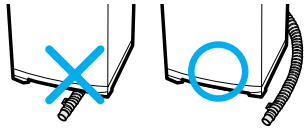

SW70W9XFP-02961E-01_AR.indd 19 12/18/2012 7:06:43 PM

التركيب والصيانة

ضبط ارتفاع الغسالة

تأكد من استواء الغسالة عن طريق ضبط أرجل الاستواء.

كن حذراً حتى لا تعلق يديك تحت أرجل الغسالة.

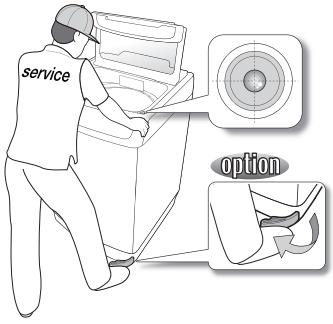

١. اسحب المقابض الموجودة على يمين ويسار الجزء الأمامي للغسالة وإزاحتها.
٢. قم بتعديل ارتفاع الغسالة لأعلى أو لأسفل.
٣. بعد الانتهاء من ضبط الارتفاع، قم بدفع المقابض للخلف لتثبيت أرجل الضبط في مكانها.

مؤشر مستوى الماء	السبب	كيفية ضبط الاستواء
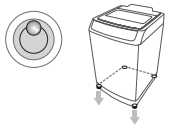	مقدمة الغسالة منخفضة	حدد مستوى الغسالة عن طريق ضبط الأرجل.
	خلفية الغسالة منخفضة	تعديل الارتفاع باستخدام الدعامات الموجودة في الخلف.
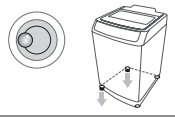	الجانب الأيسر من الغسالة منخفض	قم بتعديل الجانب الأيسر باستخدام الأرجل القابلة للتعديل الموجودة في المقدمة والدعامات الموجود في الخلف.
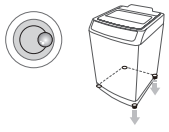	الجانب الأيمن من الغسالة منخفض	قم بتعديل الجانب الأيسر باستخدام الأرجل القابلة للتعديل الموجودة في المقدمة والدعامات الموجود في الخلف.

ضبط استواء الغسالة باستخدام مسامير القلاووظ المخصصة للاستواء (اختيارية)

١. ارفع الغسالة برفق ولف الأرجل القابلة للضبط إلى اليسار لضبطها على وضع الاتزان الأمثل.

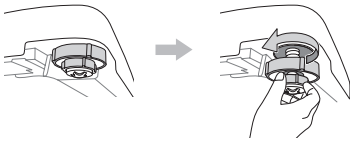

٢. عند الانتهاء، أنزل الغسالة إلى موضعها الأصلي.

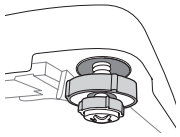

٣. بعد ضبط الأرجل، احرص على ربط صمولة التأمين لأغراض السلامة. (قد يتسبب عدم القيام بذلك في عدم تثبيت الغسالة وتحركها من مكانها.)

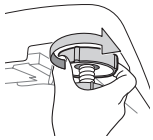

اختبار تشغيل

تأكد من أنك قمت بتركيب الغسالة الخاصة بك بطريقة صحيحة من خلال تشغيل دورة **شطف+تجفيف** بعد الانتهاء من التركيب.

SW70W9XFP-02961E-01_AR.indd 20 12/18/2012 7:06:47 PM

إضافة المسحوق

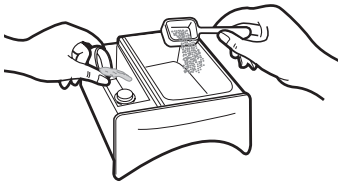

١. افتح درج مسحوق الغسيل ثم قم بإضافة مسحوق البودرة إلى حيز المسحوق.
٢. أضف المسحوق بالتساوي حتى لا يفيض على حافة الدرج.
- استخدم كمية مناسبة من المسحوق.
إذا قمت باستخدام مسحوق زيادة عن الكمية القياسية أو كانت درجة الحرارة شديدة الانخفاض ولم يتم إذابة المسحوق في الماء بشكل جيد فإن ذلك يتسبب في ترك أثر للمسحوق على الغسيل وفي الخرطوم والحوض. وقد يتسبب في إحداث تلف مثل اتساخ الملابس وفقدان لونها.
- إذا قمت باستخدام مسحوق بودرة وظلّ له أثر على الغسيل، فإن ذلك قد يسبب رائحة كريهة. قم بشطف الغسيل بشكل كاف في ماء نظيف.

تنبيه

إذا قمت بتوزيع مسحوق بودرة على الغسيل مباشرة، فإن ذلك قد ينتج عنه تلطخ ألوان الغسيل. تأكد من إدخال المسحوق في حجيرة المسحوق.

قد يتبقى المسحوق في حجيرة المسحوق في حالة انخفاض ضغط الماء.

إضافة منعّم الأقمشة

١. عند تخزين كمية مناسبة (مقدار مرة واحدة) من ملين الأقمشة في مكان توريد الملينات، يتم وضعها في الدورة الأخيرة من الشطف.
٢. لا تستخدم المسحوق أو المبيض أو النشا في درج المنعّم.
٣. يؤدي الإفراط في استخدام المنعّم إلى نتائج غير مرضية.
٤. لا تفتح الغطاء أثناء الدورة Spin (تنشيف). إذا تم إضافة منعّم الأقمشة في وقت سابق، فإن هذا سينقص من فعاليته.
٥. لا تترك الملين في موزع الملين لمدة طويلة لأنه قد يتجمد.

قد يتبقى ملين الأقمشة في حجيرة الملين في حالة انخفاض ضغط الماء. في تلك الحالة، ضع ملين الأقمشة في الحوض بشكل مباشر.

SW70W9XFP-02961E-01_AR.indd 21 12/18/2012 7:06:48 PM

التركيب والصيانة

مصفاة وصلة التزوّد بالماء

١. انزع المصفاة واغسلها جيداً.

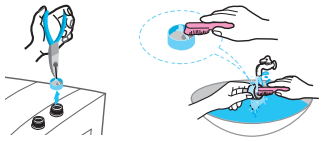

٢. ادفع المصفاة وصل الخرطوم بصمام التزوّد بالماء بإحكام.

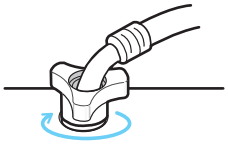

٣. تحقق من عدم وجود تسرب.
انتبه إلى إحكام ربط الوصلة.

تنظيف المصفاة

قم بتنظيف شبكة المصفاة بانتظام للمحافظة على نظافة الغسالة.

١. ادفع الجزء العلوي من المصفاة الصحية واجذبه للداخل.

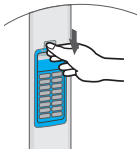

٢. افتح الغطاء كما هو مبين بالشكل.

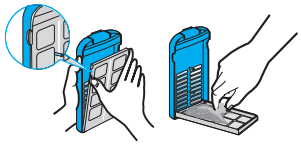

٣. نظف المصفاة الصحية.

٤. أغلق الغطاء وقم أولاً بإدخال الجزء السفلي في الحاوية ثم ادفع المصفاة حتى تسمع صوت "نقرة".

SW70W9XFP-02961E-01_AR.indd 22 12/18/2012 7:06:51 PM

تنظيف مصفاة المضخة (ميزة اختيارية)

١. ضع قطعة من القماش أو منشفة أسفل مصفاة الغسيل حتى لا تبتل الأرض. ولف المصفاة عكس اتجاه حركة عقارب الساعة واسحبها للخارج.
٢. قم بإزالة أي أوساخ من المصفاة.
٣. قم بإعادة المصفاة إلى مكانها عن طريق لف المصفاة في اتجاه عقارب الساعة حتى تعود إلى مكانها.

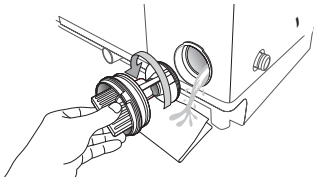

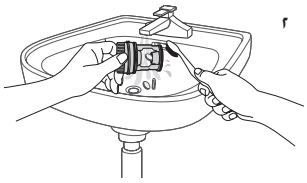

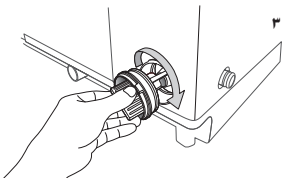

تنظيف حجيرة المسحوق

١. افصل حجيرة المسحوق عن الغسالة.
٢. افصل غطاء الشطف ونظّفه من حجيرة المسحوق.
٣. قم بفك غطاء الشطف ثم أدخل حجيرة المسحوق في الغسالة.

SW70W9XFP-02961E-01_AR.indd 23 12/18/2012 7:06:54 PM

استكشاف المشاكل وحلها

المشكلة	الحل
الغسالة لا تعمل	• هل صنبور الماء مفتوح؟ • هل الغسالة متصلة بمصدر التيار الكهربي؟ • هل التيار الكهربائي مقطوع؟ • هل ضغط الماء كافي؟
لا يتم تصريف الماء 	• هل خرطوم التصريف موضوع لأسفل؟ (بدون مضخة) • هل خرطوم التصريف متجمد؟ • هل خرطوم التصريف مسدود؟ • إذا لم يتم تصريف الماء خلال ٣٠ دقيقة، سيسمع طنين، وسيعرض مؤشر الوقت المتبقي "5E".
لا يتم تزويد الماء 	• هل صنبور الماء مفتوح؟ • هل الماء مقطوع؟ • هل خرطوم التزوّد بالماء أو وصلة الخرطوم مسدودة؟ • هل صنبور الماء متجمد؟ • إذا لم يتم الانتهاء من التزود بالماء في خلال ساعة واحدة أو لم يحدث تغير في مستوى الماء بعد ٥ دقائق (١٠ دقائق - الطرازات المحددة فقط) من بدء التزود بالماء، سيُسمع طنين وسيتم عرض "4E" على مؤشر الوقت المتبقي.
التنشيف لا يعمل 	• هل تم توزيع الغسيل بالتساوي في الغسالة؟ • هل تم وضع الغسالة على أرض ثابتة ومستوية؟
فيضان الماء 	• أعد التشغيل بعد التنشيف. • في حالة استمرار ظهور مؤشر العطل، اتصل بالشركة.
يشير ذلك إلى حدوث خطأ بوظيفة "التأمين ضد عبث الأطفال" 	• تومض رسالة الخطأ بفاصل زمني ثانية واحدة فقط ويتم تصريف الماء مع إصدار صوت تنبيه. (الرسالة المعروضة: "CL" أو "dE") • هذه الوظيفة لمنع الأطفال من الغرق عند السقوط في حوض الغسيل. عند اكتمال التصريف وإيقاف تشغيل الطاقة ثم تشغيلها، يتم تشغيل الغسالة بشكل عادي. • لمسح شاشة "CL"، أغلق باب الغسالة وأوقف تشغيل الغسالة ثم أعد تشغيلها بعد اكتمال التصريف.
خطأ بتسرب الماء 	• تأكد من وضع نهاية خرطوم التصريف على الأرض. (ينبغي أن يكون الخرطوم معلقًا فوق المضخة - ماسك الخرطوم.) • تحقق من عدم انسداد خرطوم التصريف بواسطة أي مواد خارجية. • في حالة استمرار المشكلة، اتصل بمركز الخدمة.

SW70W9XFP-02961E-01_AR.indd 24 12/18/2012 7:06:57 PM

الغسالة لا تعمل؟

المشكلة	الفحص
انقطاع التيار الكهربي.	هل الجهد الكهربي طبيعي؟
	هل الغسالة متصلة بمصدر التيار الكهربي؟ قم بتوصيل سلك التيار الكهربي. ⊃ **لا يتم تصريف الماء.**
	هل خرطوم التصريف متجه لأسفل؟ اجعل خرطوم التصريف متجهاً لأسفل.
	هل خرطوم التصريف منثني؟ قم بفك الثنيات الموجودة في خرطوم التصريف.
	هل فتحة خرطوم التصريف مسدودة؟ قم بإزالة النفايات جيداً.
الغسالة لا تعمل.	هل غطاء الغسالة مفتوح؟ ⊃ **أغلق الغطاء.**
	هل الزر Pause (توقف) قيد التشغيل؟ ⊃ **اضغط على الزر Start/Pause (تشغيل/توقف) مرة أخرى وتأكد من بدء تشغيل الغسالة.**
	هل تم ملء الغسالة بالماء حتى المستوى المطلوب؟ ⊃ **إذا كان ضغط الماء منخفضاً، فستستغرق عملية بدء الغسيل وقتاً طويلاً.**
	هل الصنبور مغلق؟ ⊃ **افتح الصنبور لتوريد الماء.**
إذا كان خرطوم التصريف والدوران متجمدين، اتبع بما يلي.	• أضف الماء الساخن إلى حاوية الغسيل المتجمدة وأزل خرطوم التصريف. انقع الخرطوم في الماء الساخن. • اسكب الماء الساخن في المجفف لمدة ١٠ دقائق. • ضع منشفة مبللة بالماء الساخن على وصلة خرطوم التصريف. • بعد فك تجميد خرطوم التصريف، قم بتوصيله مرة أخرى وتحقق مما إذا كان تصريف الماء يتم بالشكل الملائم.
يتم تصريف الماء إلى الخارج في الحال.	• في حالة انسداد خرطوم التصريف بعملات معدنية أو دبابيس، خرطوم التصريف معلقا على خطّاف خرطوم التصريف. قم بملء نصف سلة التنشيف بالماء وحاول إجراء التنشيف مرة أخرى.
يتم تسريب الماء من وصلة خرطوم توريد الماء.	إذا كان الجزء الخاص بوصلة الصنبور غير محكم الربط، فقد يتسرب الماء. ⊃ **كرر خطوات التجميع مرة أخرى. (راجع "توصيل خرطوم توريد الماء")**
	تحقق مما إذا كان المطاط الخاص بخرطوم تزويد الماء في وضعه الصحيح. ⊃ **اربط المسامير مرة أخرى بإحكام.**
	هل خرطوم توريد الماء منثني؟ ⊃ **قم بفك الثنايا الموجودة في الخرطوم.**
	إذا كانت عملية توريد الماء قوية جداً، قد يحدث تسرب للماء. ⊃ **أغلق الصنبور قليلاً.**
	هل يحدث تسرب للماء من الصنبور نفسه؟ ⊃ أصلح الصنبور. لا يتم توريد الماء.
يتم تسريب الماء من وصلة خرطوم توريد الماء.	هل قمت بالضغط على الزر Start/Pause (تشغيل/توقف) بعد تحديد توريد الماء؟ ⊃ **في حالة عدم الضغط على الزر Start/Pause (تشغيل/توقف)، لن يتم التزود بالماء. اضغط على الزر Start/Pause (تشغيل/توقف).**
	هل الصنبور مغلق؟ ⊃ **افتح الصنبور.**
	هل شبكة المصفاة الموجودة في خرطوم توريد الماء مسدودة بمواد غير نظيفة؟ ⊃ **نظف شبكة المصفاة بفرشاة أسنان.**
	هل تم إيقاف توريد الماء؟ ⊃ في حالة توقف توريد الماء مؤقتاً، أغلق الصنبور وافصل التيار.
تُصدِر عملية التنشيف ضجيجاً وتُحدِث اهتزازات.	تحقق مما إذا كان قد تم توزيع الغسيل بالتساوي في الغسالة. ⊃ **قم بتوزيع الغسيل بالتساوي وابدأ تشغيل الغسالة مرة أخرى.**
	تحقق مما إذا كانت الغسالة مستوية على أرض ثابتة ومسطحة. ⊃ **اجعل الغسالة مستوية.**
	هل المقابض الخاصة باستواء الأرجل غير مربوطة بإحكام؟ ⊃ اضبط استواء الأرجل.
	هل يوجد حول الغسالة مواد غير ضرورية؟ ⊃ أبعد تلك الأشياء غير الضرورية عن الغسالة.

SW70W9XFP-02961E-01_AR.indd 25 12/18/2012 7:06:58 PM

المواصفات

SW70W9

فيفجتلا قلومحلا يصقأ مارجوليكلاب سبلالما	SW70W9	٧,٠ كجم	مستوى الماء القياسي	٧	٧٤ لتر
استهلاك الطاقة	WASH (غسيل)	٤٧٠ واط			
	SPIN (تنشيف)	٢٨٠ واط		٥	٥٨ لتر
الأبعاد (م)		٦٠١ عرض × ٦٥٤ عمق × ٩٦٨ ارتفاع (قاعدة منخفضة) ٦٠١ عرض × ٦٥٤ عمق × ٩٩٣ ارتفاع (قاعدة مرتفعة)		٣	٥٠ لتر
الوزن		٤٤ كجم		١	٣٨ لتر
ضغط الماء		٠,٠٥ إلى ٠,٧٨ ملليباسكال (٠,٥ إلى ٨,٠ كجم قدم/سم٢)	استهلاك الماء		٢١٦ لتر
نوع الغسيل		النوع الرجاج	سرعة التنشيف		٧٢٠ دورة في الدقيقة

SW80W9

فيفجتلا قلومحلا يصقأ مارجوليكلاب سبلالما	SW80W9	٨,٠ كجم	مستوى الماء القياسي	٧	٧٨ لتر
استهلاك الطاقة	WASH (غسيل)	٤٧٠ واط			
	SPIN (تنشيف)	٢٨٠ واط		٥	٥٨ لتر
الأبعاد (م)		٦٠١ عرض × ٦٥٤ عمق × ٩٦٨ ارتفاع (قاعدة منخفضة) ٦٠١ عرض × ٦٥٤ عمق × ٩٩٣ ارتفاع (قاعدة مرتفعة)		٣	٥٠ لتر
الوزن		٤٤ كجم		١	٣٨ لتر
ضغط الماء		٠,٠٥ إلى ٠,٧٨ ملليباسكال (٠,٥ إلى ٨,٠ كجم قدم/سم٢)	استهلاك الماء		٢١٨ لتر
نوع الغسيل		النوع الرجاج	سرعة التنشيف		٧٢٠ دورة في الدقيقة

SW70W9XFP-02961E-01_AR.indd 26 12/18/2012 7:06:58 PM

SW70G9

فيفجتلة لومحىصقأ مارجوليكلاب سبلالا	SW70G9	٧,٠ كجم	مستوى الماء القياسي	٧	٧٤ لتر
استهلاك الطاقة	WASH (غسيل)	٤٧٠ واط			
	SPIN (تنشيف)	٢٨٠ واط		٥	٦٦ لتر
الأبعاد (م)		٦٠١ عرض × ٦٥٤ عمق × ٩٦٨ ارتفاع (قاعدة منخفضة) ٦٠١ عرض × ٦٥٤ عمق × ٩٩٣ ارتفاع (قاعدة مرتفعة)		٣	٥٤ لتر
الوزن		٤٤ كجم		١	٤٤ لتر
ضغط الماء		٠,٠٥ إلى ٠,٧٨ ملليباسكال (٠,٥ إلى ٨,٠ كجم/قدم/سم٢)	استهلاك الماء		١٥٦ لتر
نوع الغسيل		النوع الرجاج	سرعة التنشيف		٧٢٠ دورة في الدقيقة

SW80G9

فيفجتلة لومحىصقأ مارجوليكلاب سبلالا	SW80G9	٨,٠ كجم	مستوى الماء القياسي	٧	٧٨ لتر
استهلاك الطاقة	WASH (غسيل)	٤٧٠ واط			
	SPIN (تنشيف)	٢٨٠ واط		٥	٦٩ لتر
الأبعاد (م)		٦٠١ عرض × ٦٥٤ عمق × ٩٦٨ ارتفاع (قاعدة منخفضة) ٦٠١ عرض × ٦٥٤ عمق × ٩٩٣ ارتفاع (قاعدة مرتفعة)		٣	٥٤ لتر
الوزن		٤٤ كجم		١	٣٨ لتر
ضغط الماء		٠,٠٥ إلى ٠,٧٨ ملليباسكال (٠,٥ إلى ٨,٠ كجم/قدم/سم٢)	استهلاك الماء		١٥٨ لتر
نوع الغسيل		النوع الرجاج	سرعة التنشيف		٧٢٠ دورة في الدقيقة

* تم تحديد مواصفات ملصق الطاقة باستخدام البرنامج الآتي وفقًا للمعيارين SASO 2692 و SASO 2693.

- برنامج الطراز SW70G9 / SW80G9 / SW70W9 / SW80W9 هو Energy Saving (توفير الطاقة) + High Water Level (مستوى ماء عالي) + Cold&Hot (بارد وساخن).

SW70W9XFP-02961E-01_AR.indd 27 12/18/2012 7:06:58 PM

هل لديك أي أسئلة أو تعليقات؟

البلد	اتصل بـ	أو قم بزيارة موقعنا على الإنترنت
Saudi Arabia	9200-21230	www.samsung.com/ae (English) www.samsung.com/ae_ar (Arabic)

كود رقم: DC68-02961E-01_AR